 
 


INSTALLATION MANUAL

11105F

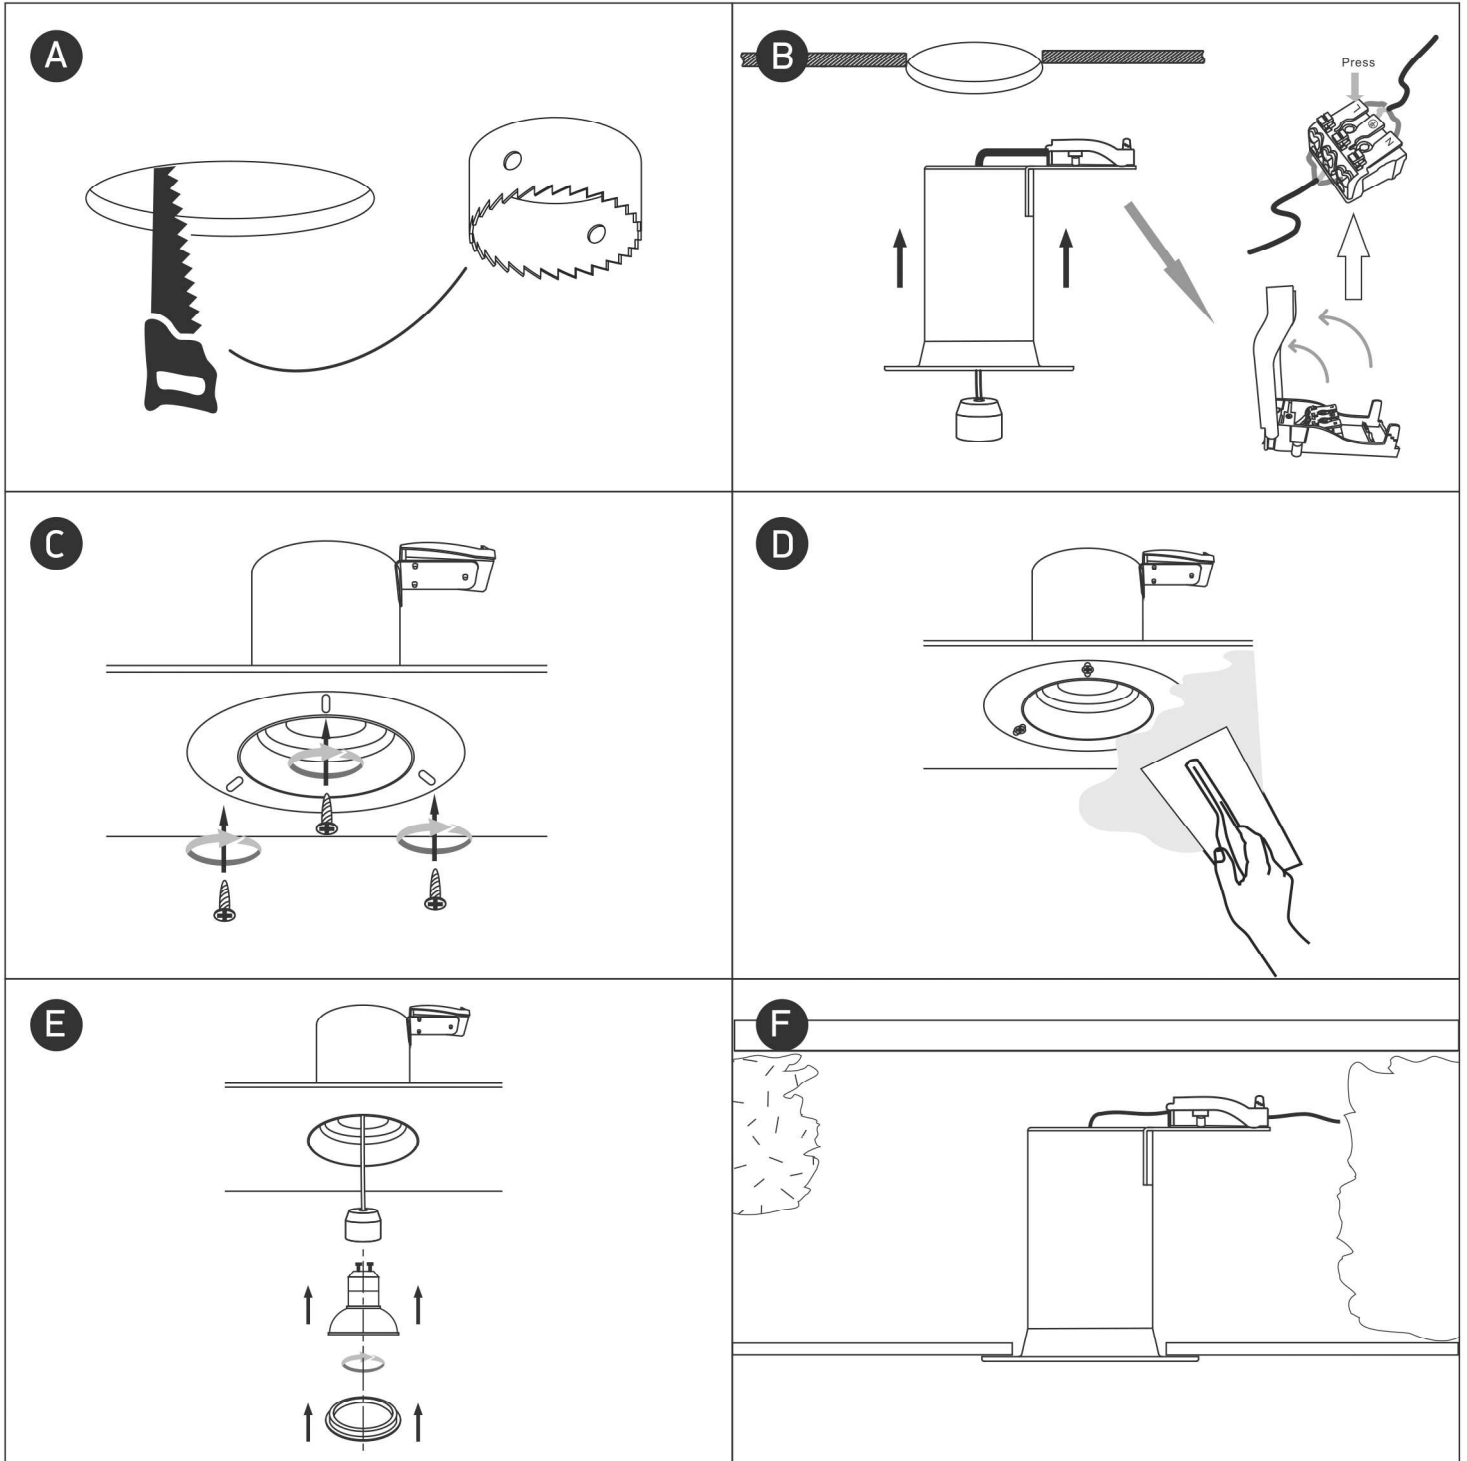

100-240V | MR16 | GU10 | 10W | IP20 | Trimless | Fire Rated | Die cast | Adjustable

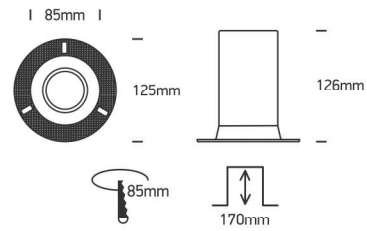

Warnings:



1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.

INSTALLATION MANUAL

11105F



100-240V | MR16 | GU10 | 10W | IP20 | Trimless | Fire Rated | Die cast | Adjustable

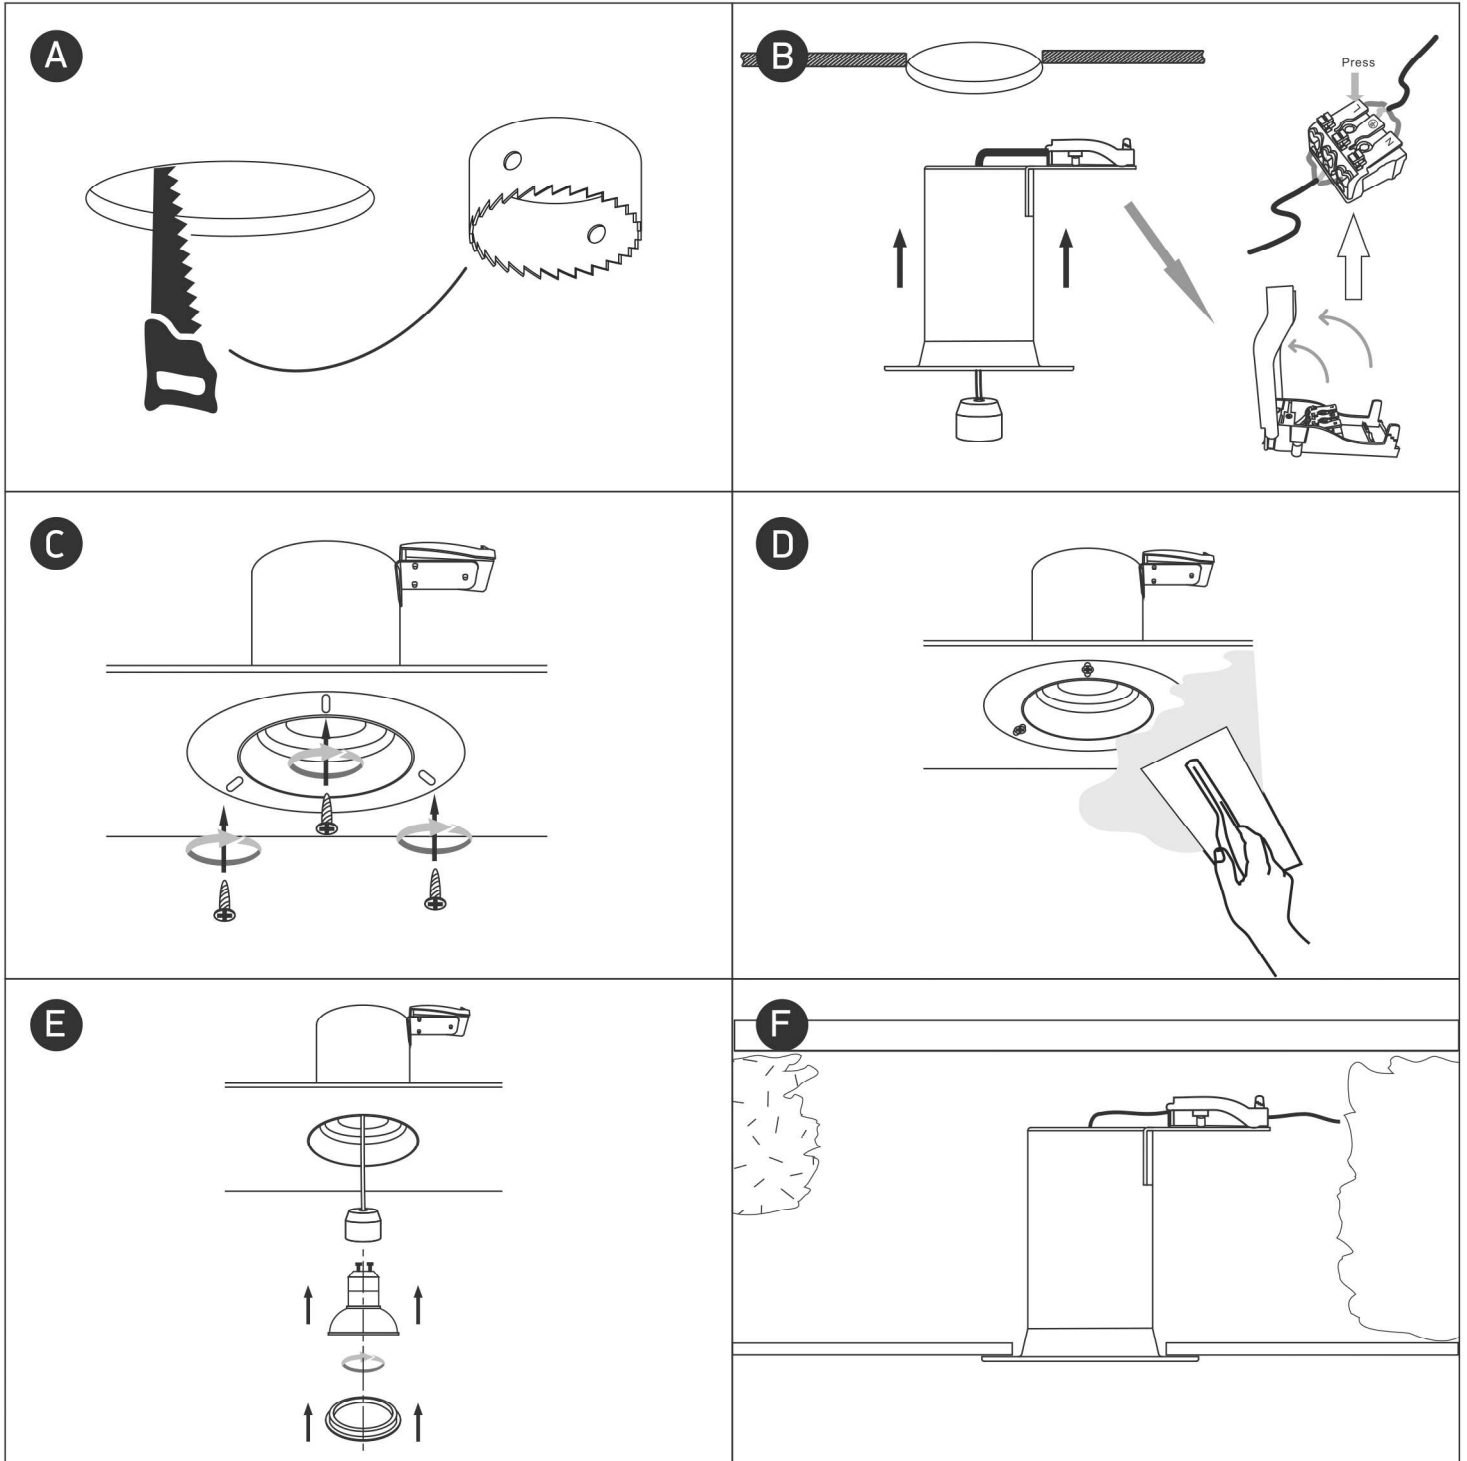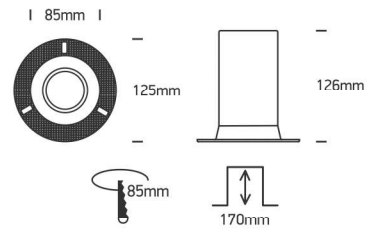  

Warnings:



1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.

INSTALLATION MANUAL

11105F



100-240V | MR16 | GU10 | 10W | IP20 | Trimless | Fire Rated | Die cast | Adjustable

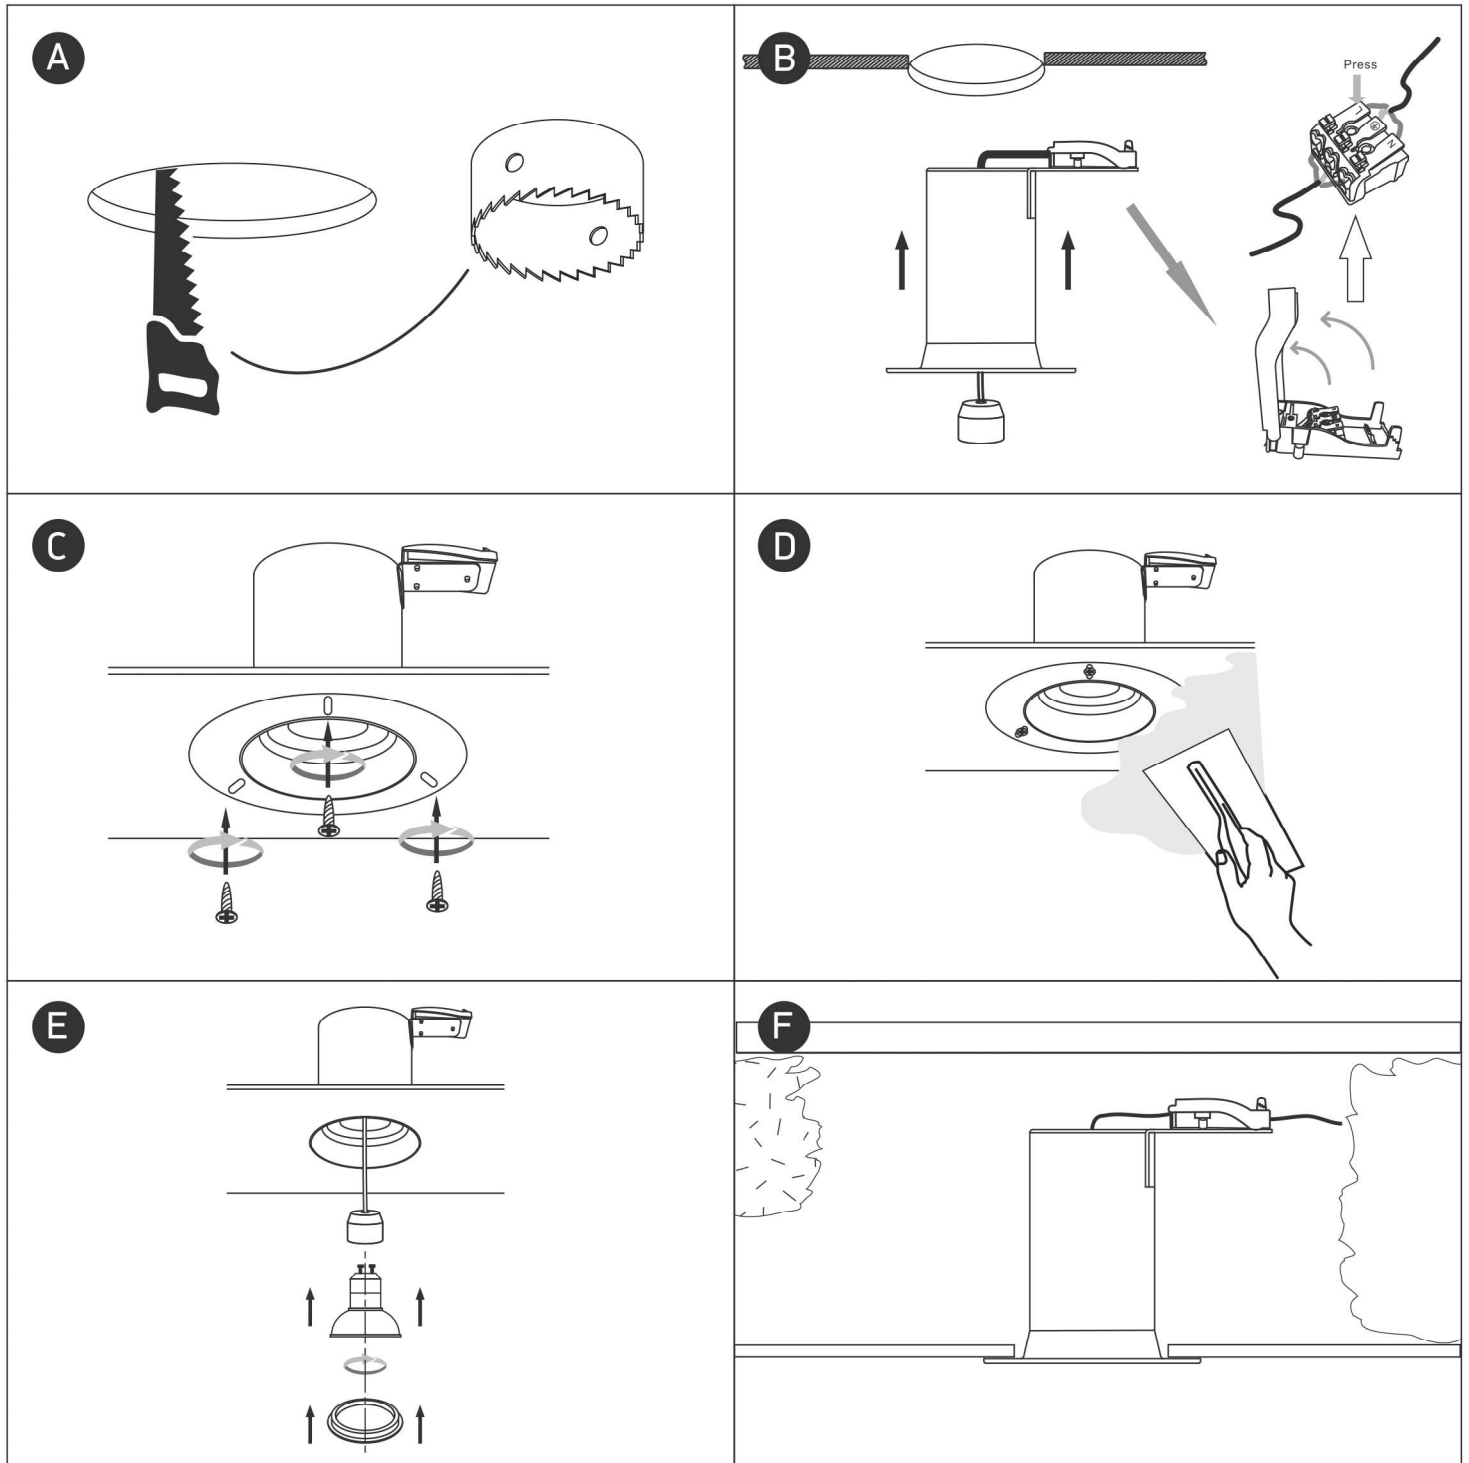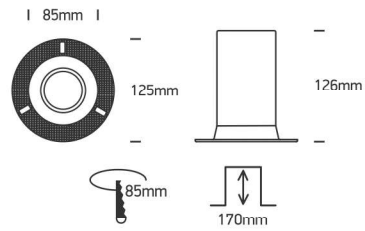  

Warnings:



1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.

INSTALLATION MANUAL

11105F



100-240V | MR16 | GU10 | 10W | IP20 | Trimless | Fire Rated | Die cast | Adjustable

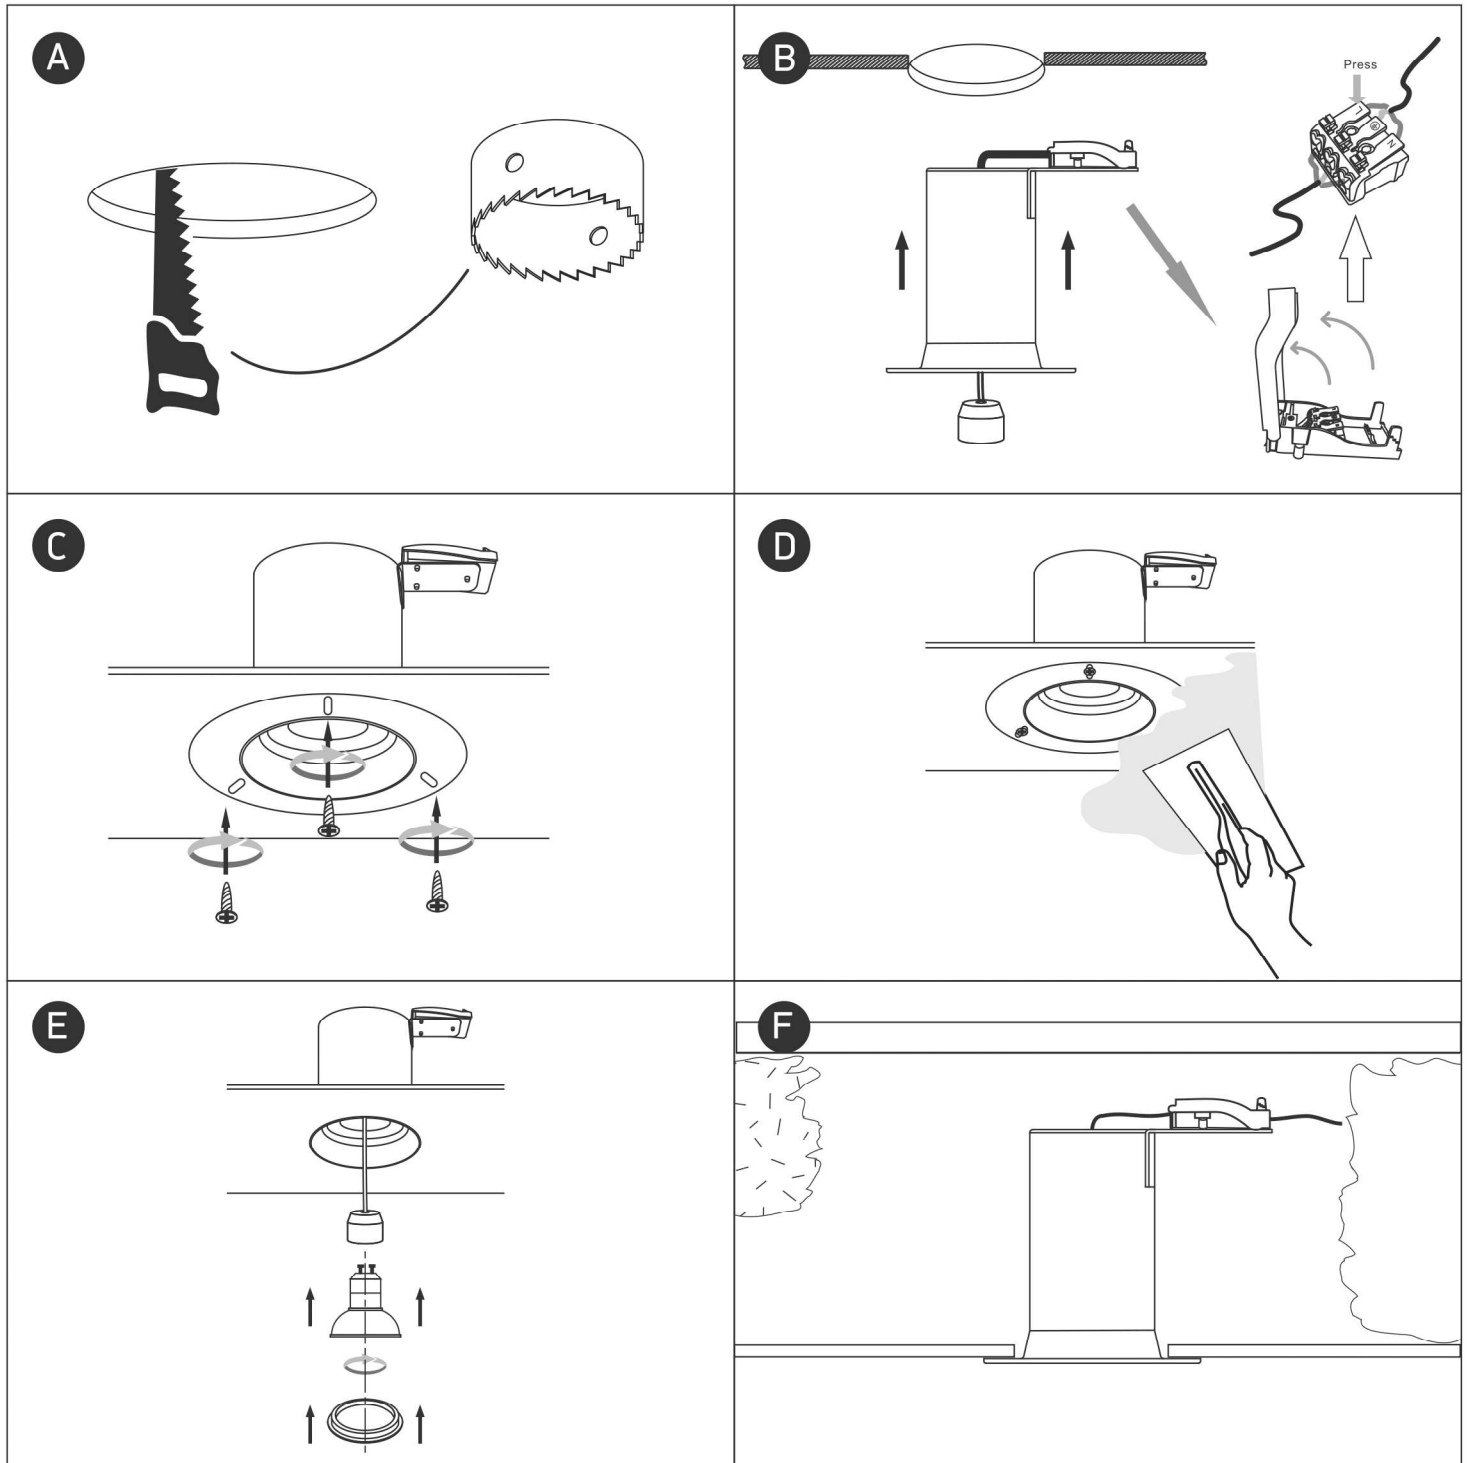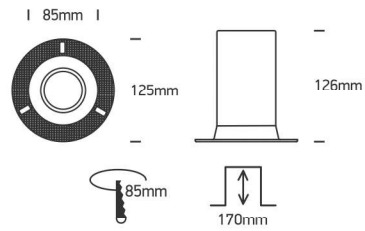  

Warnings:



1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.

INSTALLATION MANUAL

11105F



100-240V | MR16 | GU10 | 10W | IP20 | Trimless | Fire Rated | Die cast | Adjustable

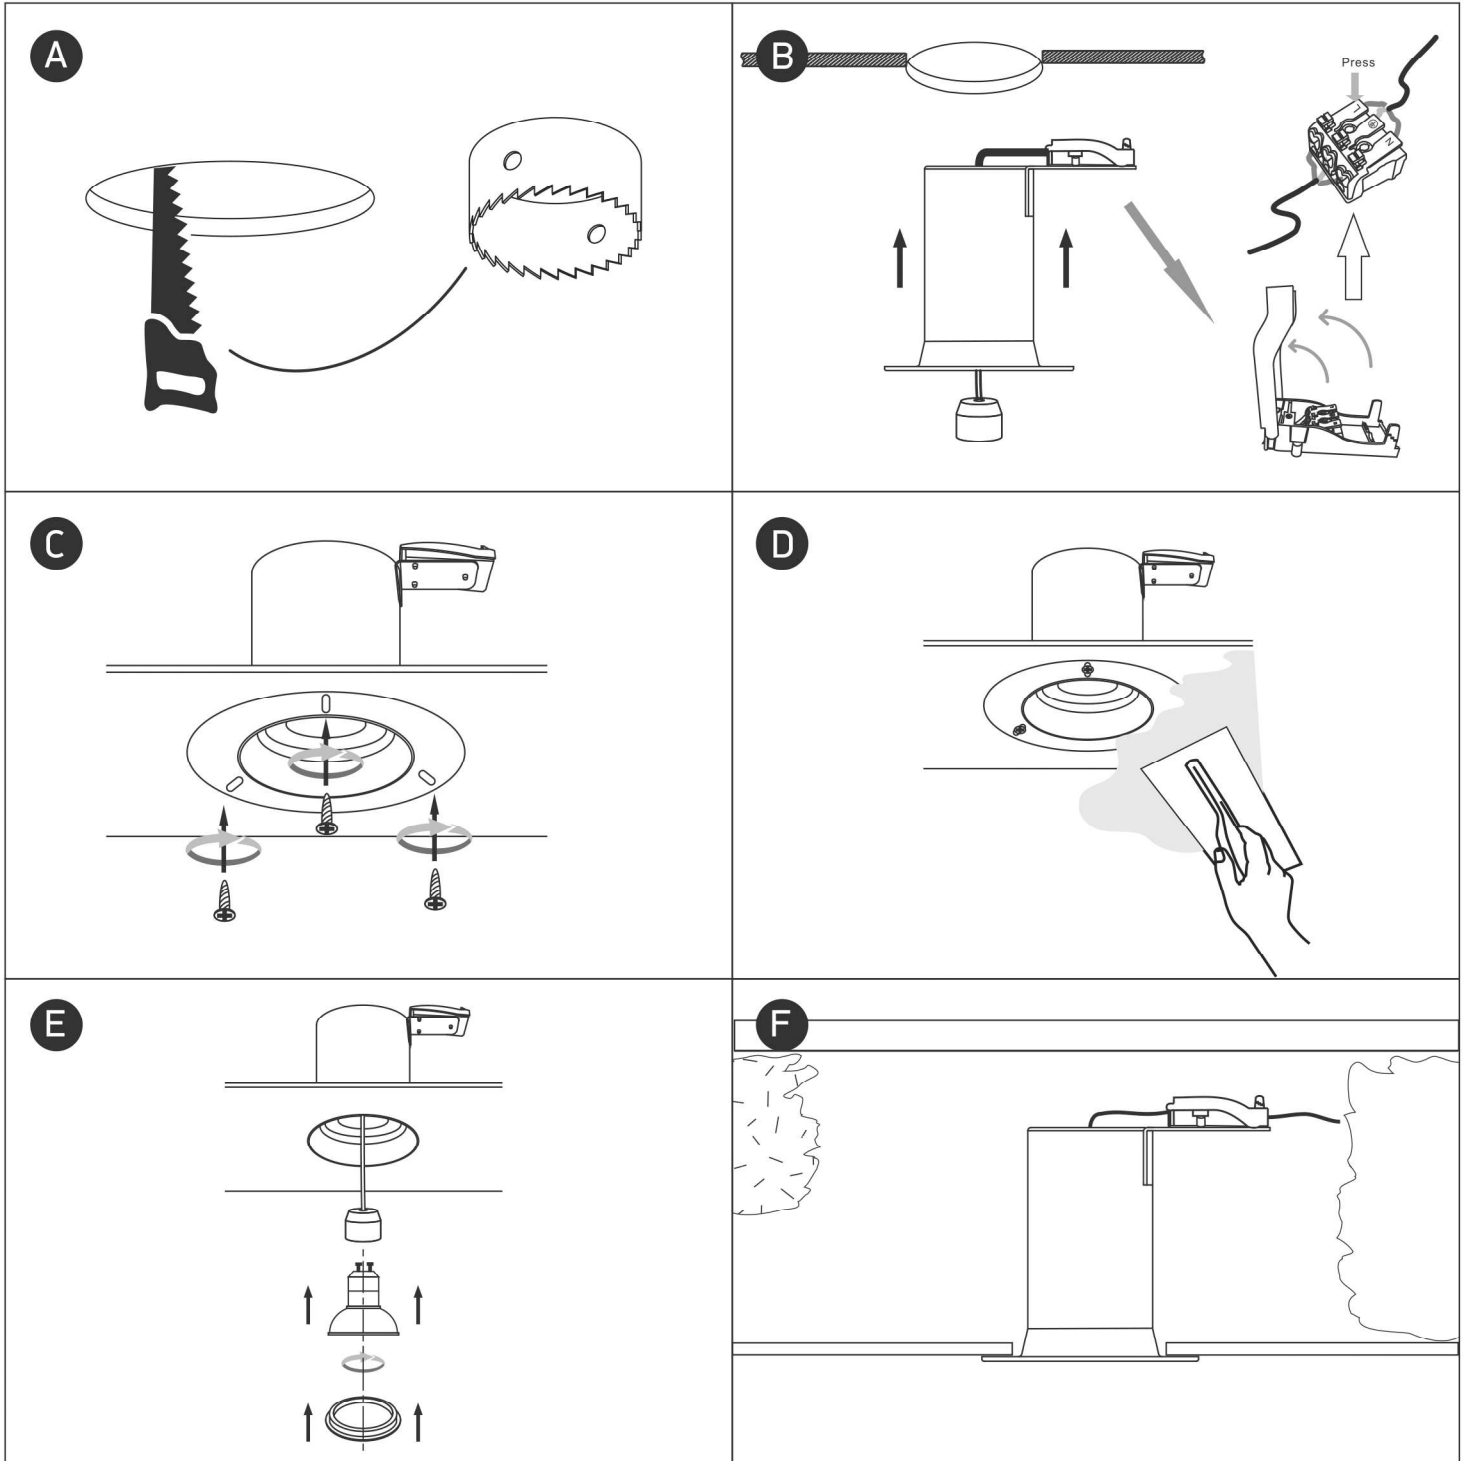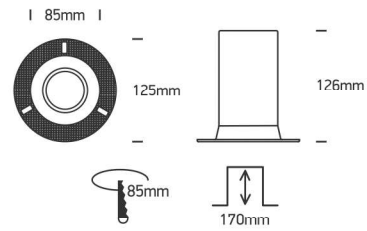  

Warnings:



1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.

INSTALLATION MANUAL

11105F



100-240V | MR16 | GU10 | 10W | IP20 | Trimless | Fire Rated | Die cast | Adjustable

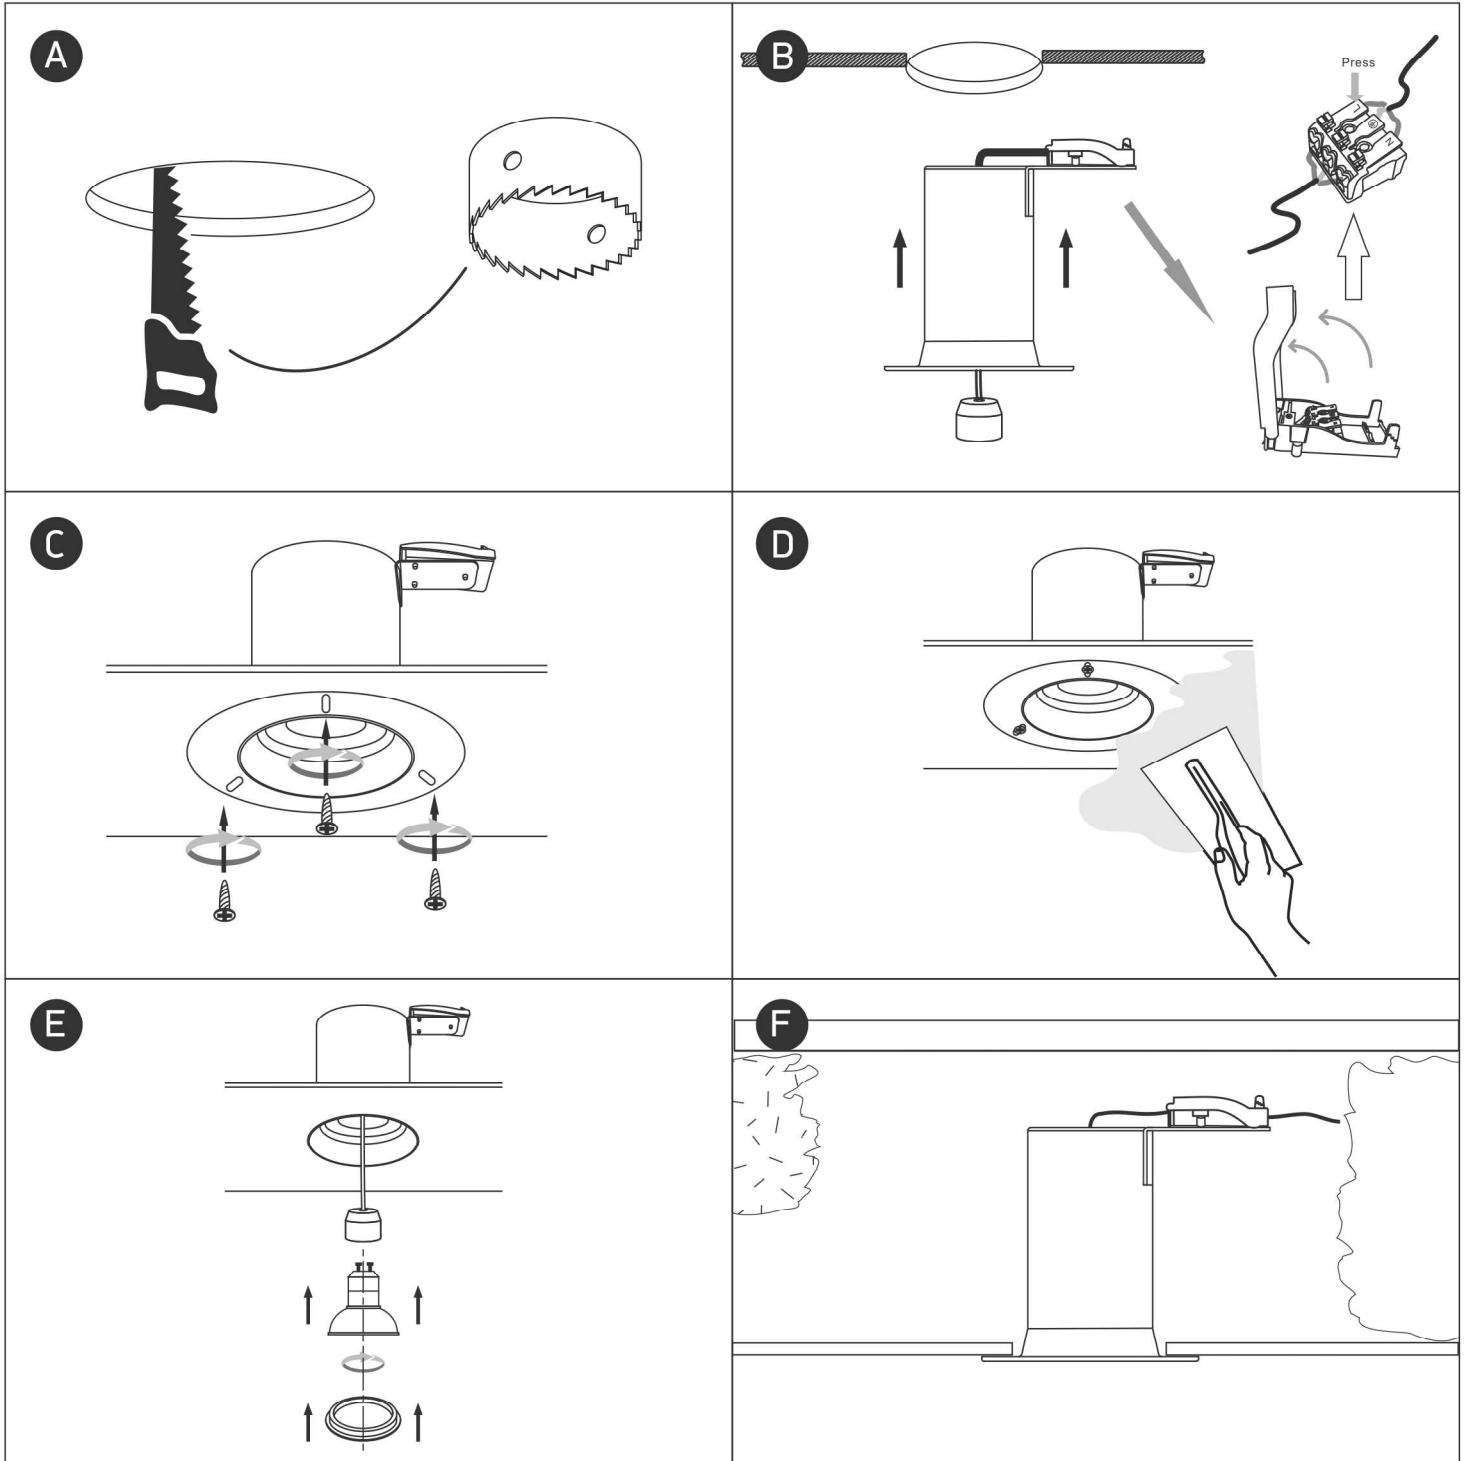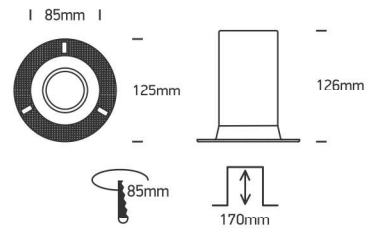  

Warnings:



1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.

INSTALLATION MANUAL

11105F



100-240V | MR16 | GU10 | 10W | IP20 | Trimless | Fire Rated | Die cast | Adjustable

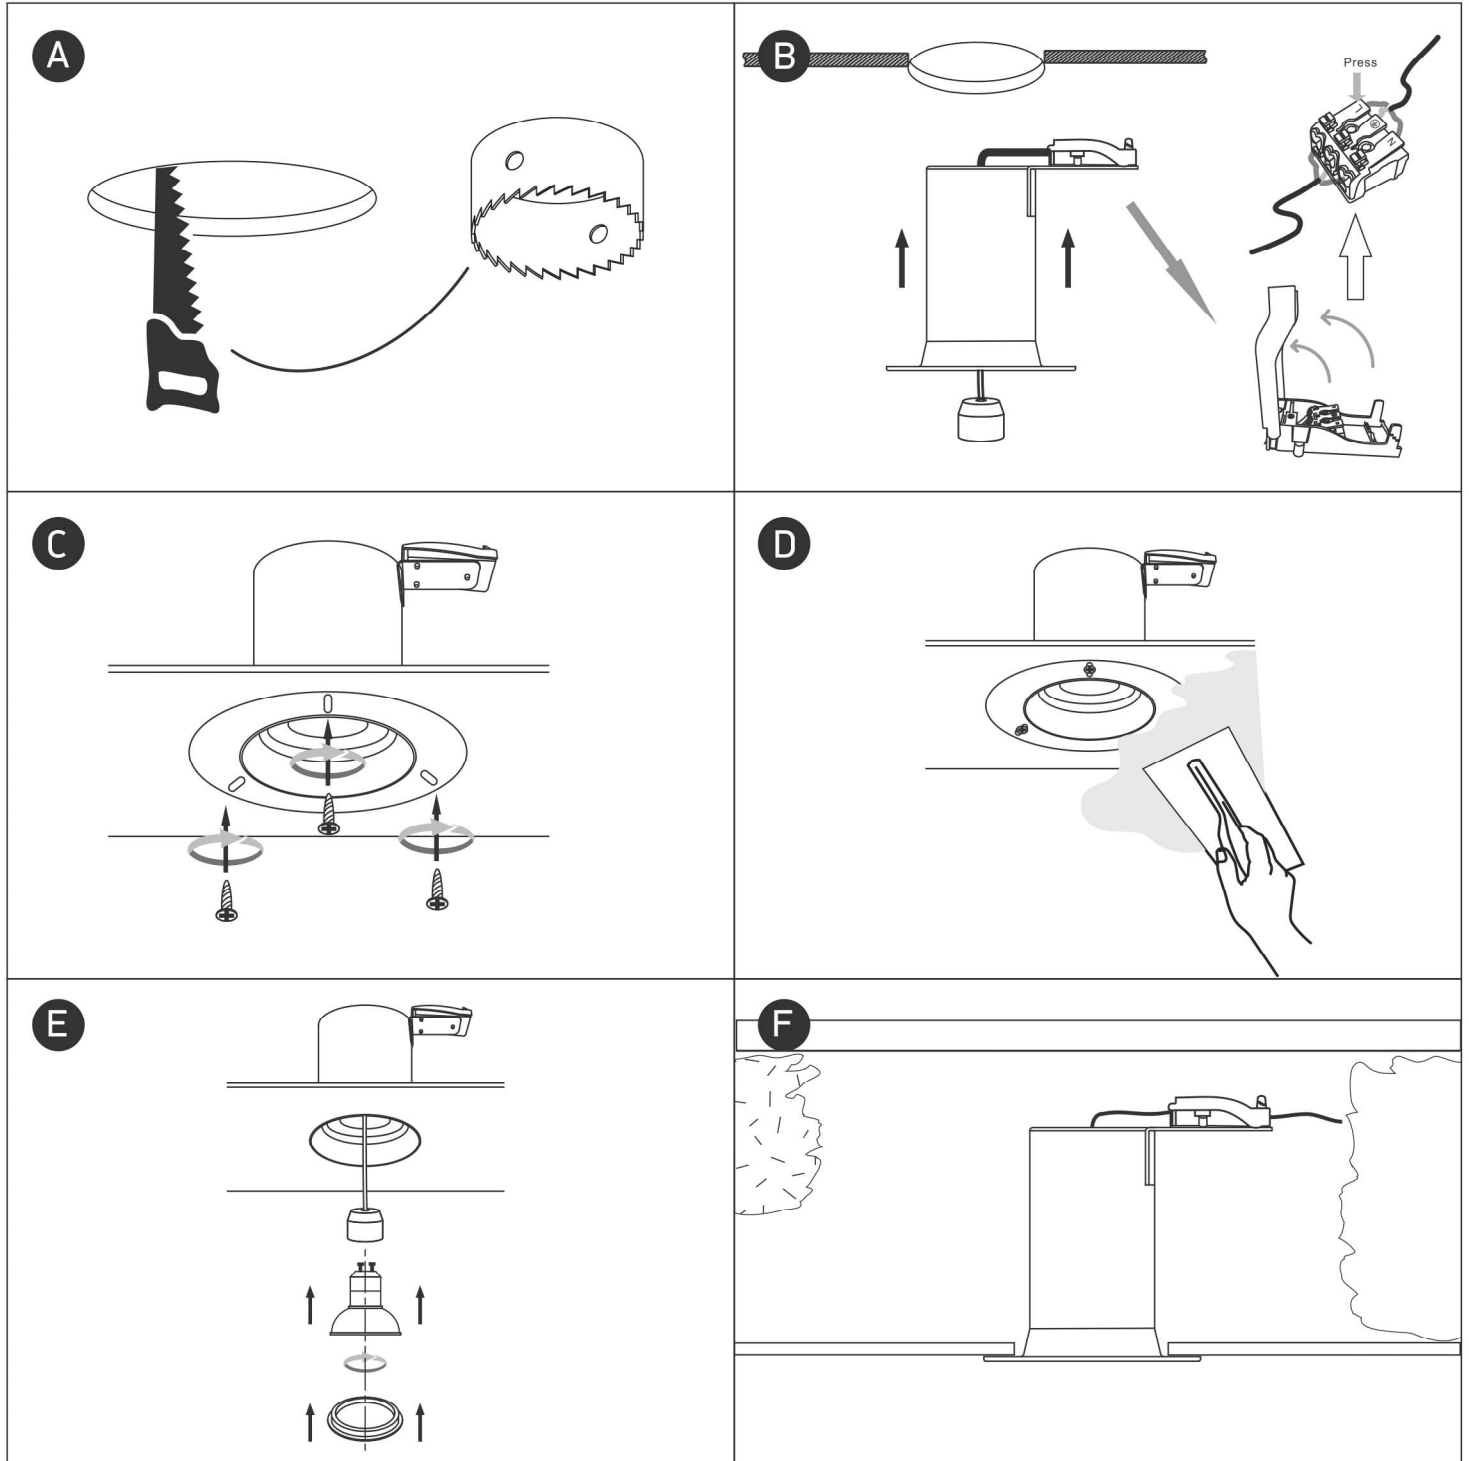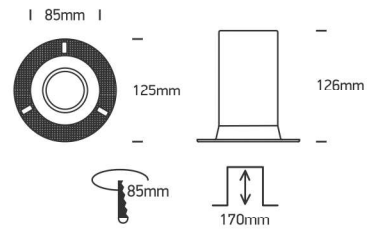  

Warnings:



1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.

INSTALLATION MANUAL

11105F



100-240V | MR16 | GU10 | 10W | IP20 | Trimless | Fire Rated | Die cast | Adjustable

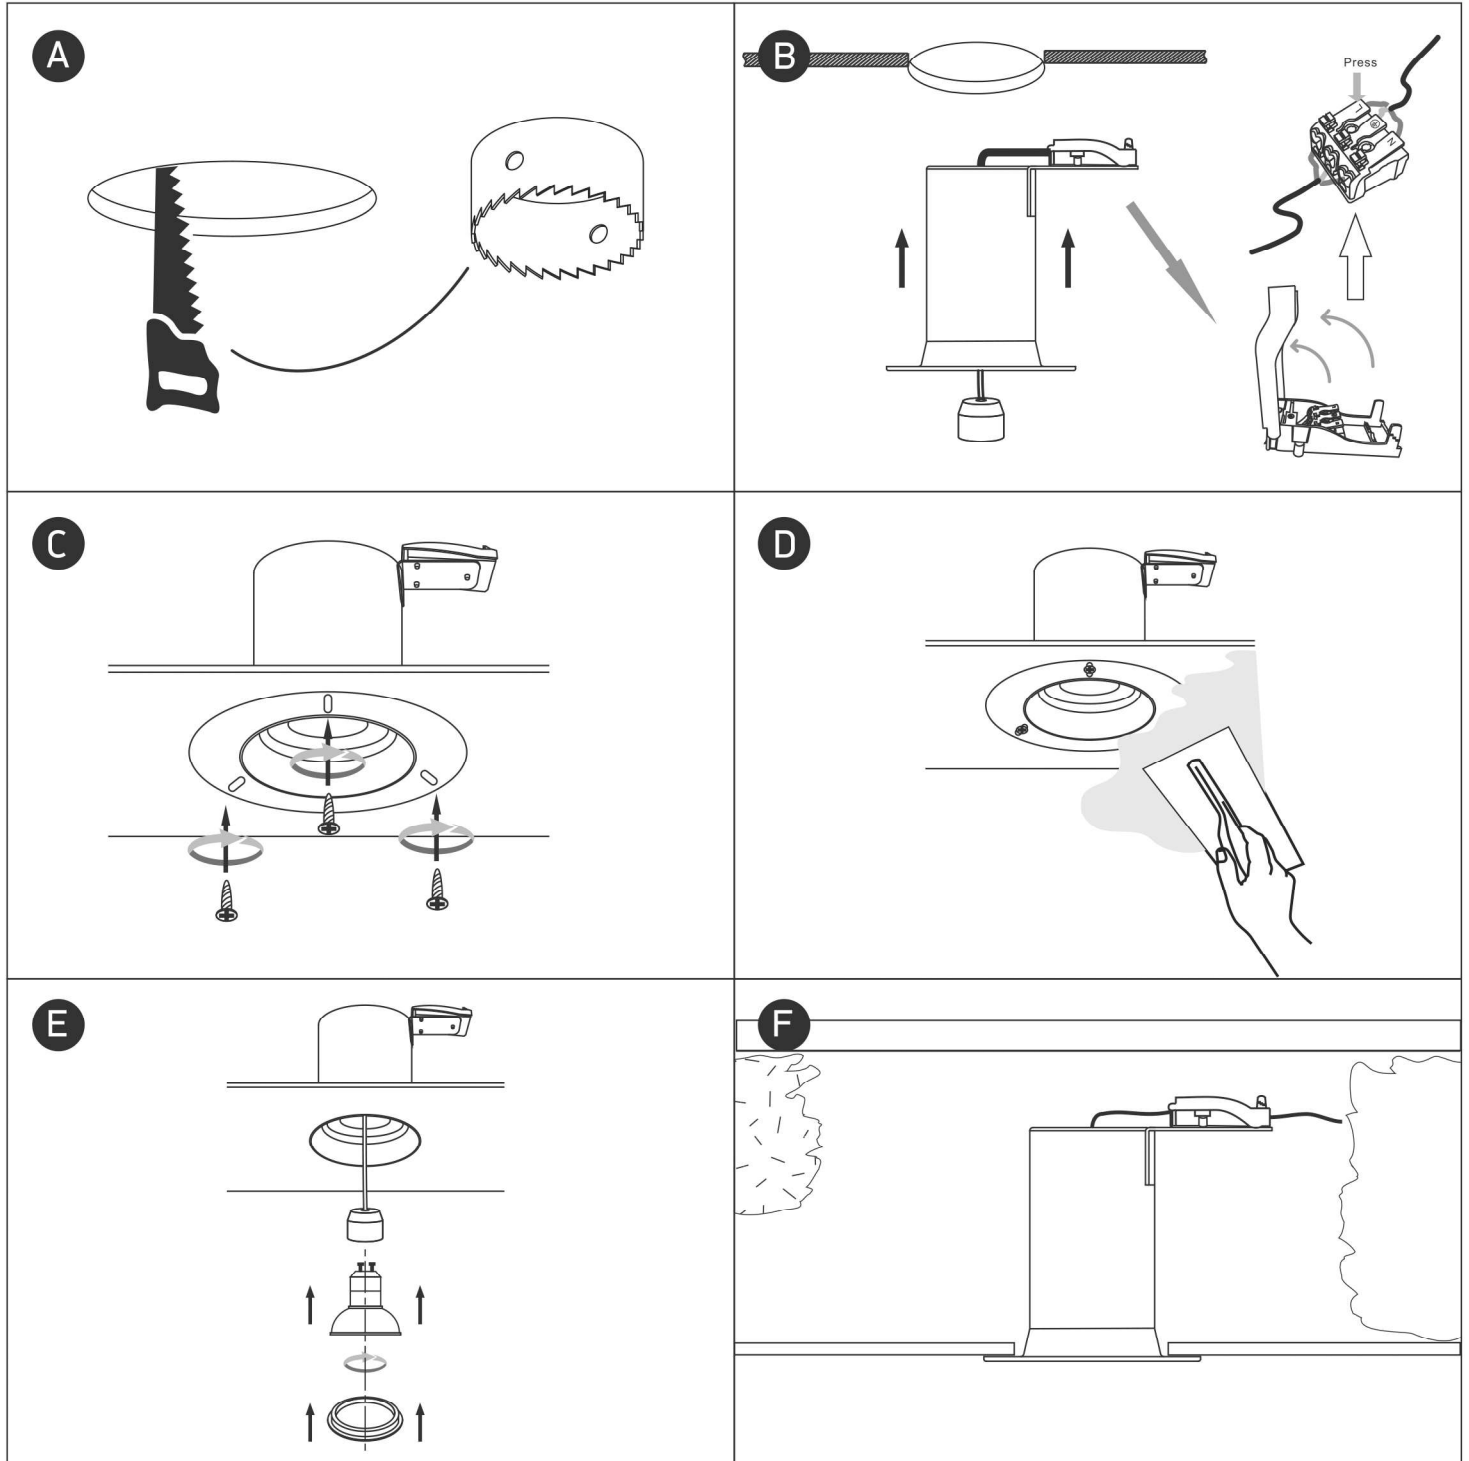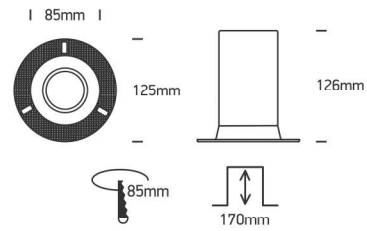  

Warnings:



1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.

INSTALLATION MANUAL

11105F



100-240V | MR16 | GU10 | 10W | IP20 | Trimless | Fire Rated | Die cast | Adjustable

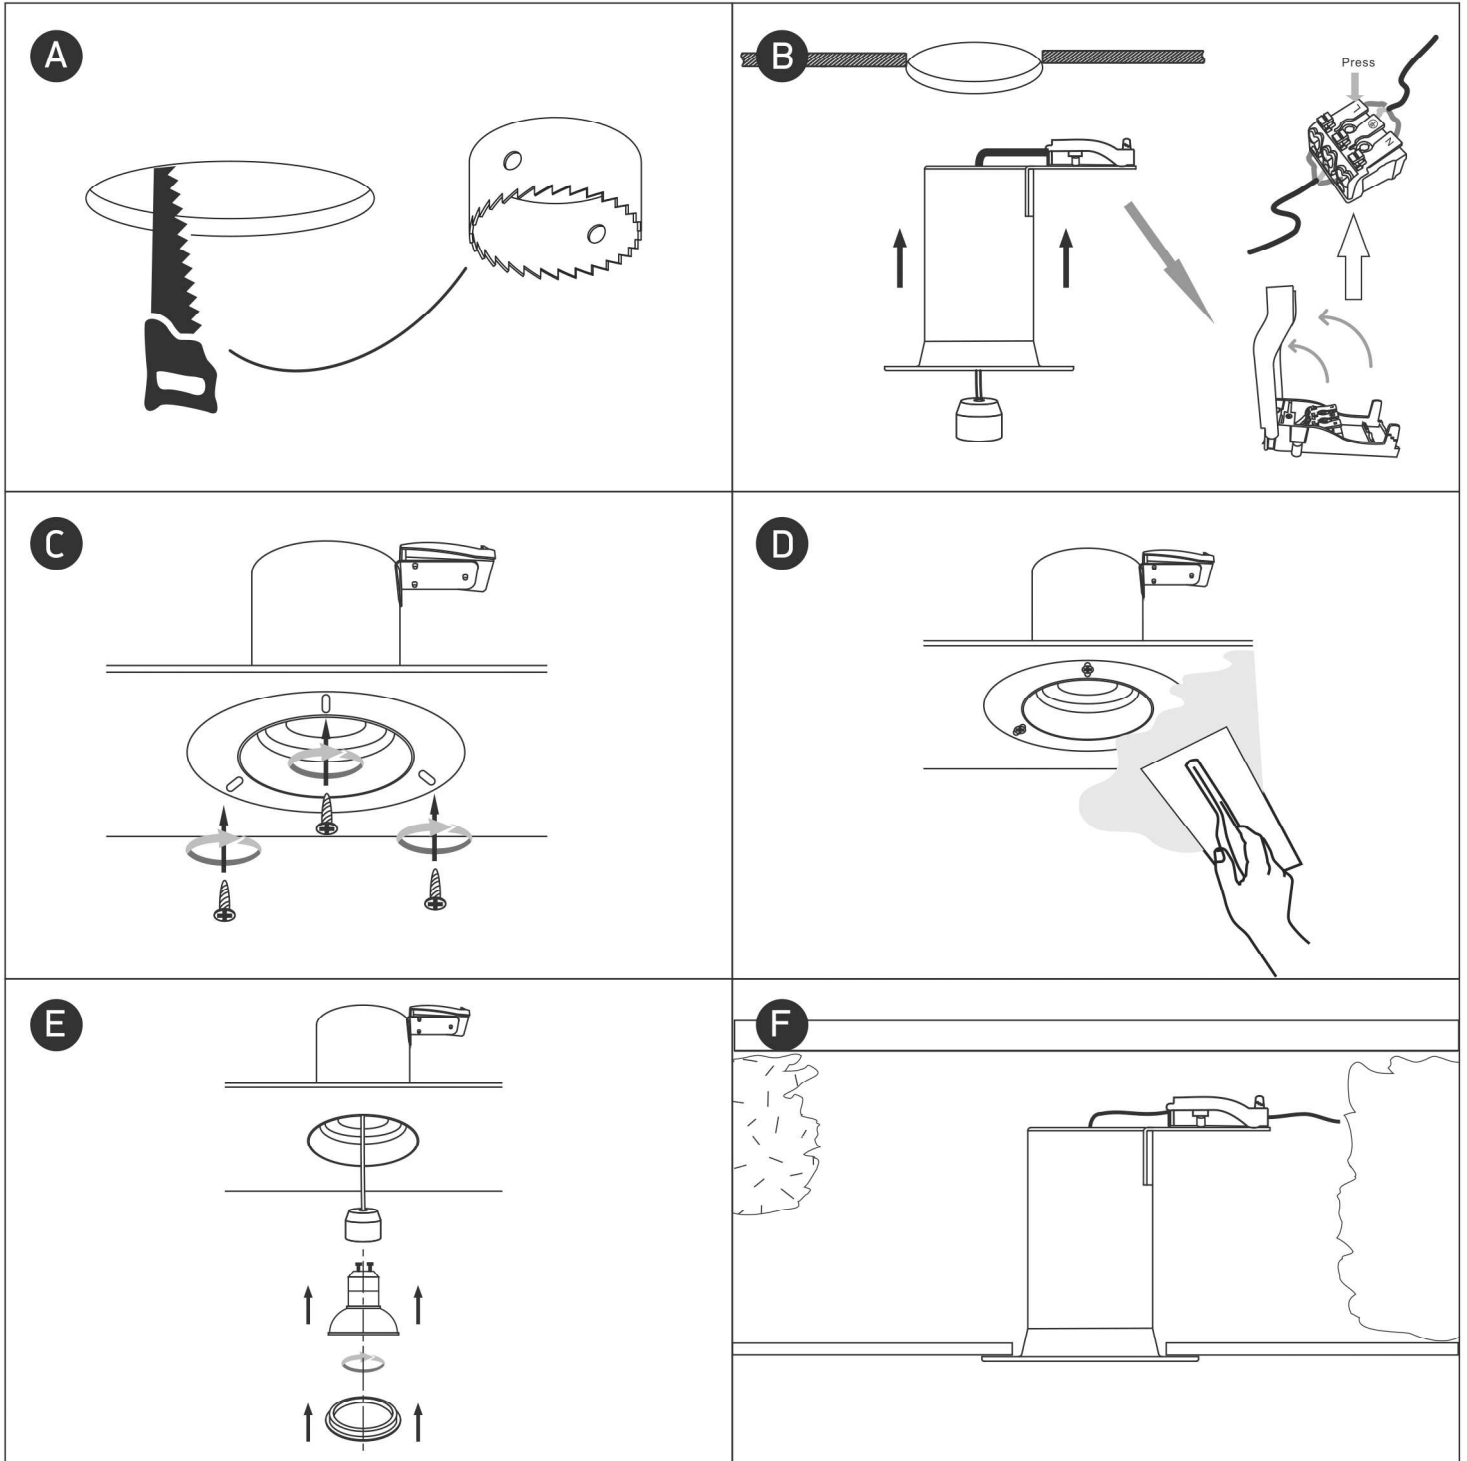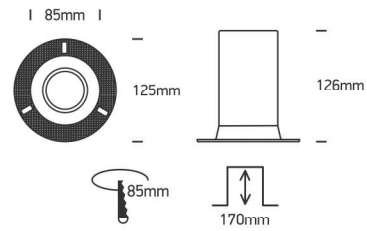  

Warnings:



1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.

INSTALLATION MANUAL

11105F



100-240V | MR16 | GU10 | 10W | IP20 | Trimless | Fire Rated | Die cast | Adjustable

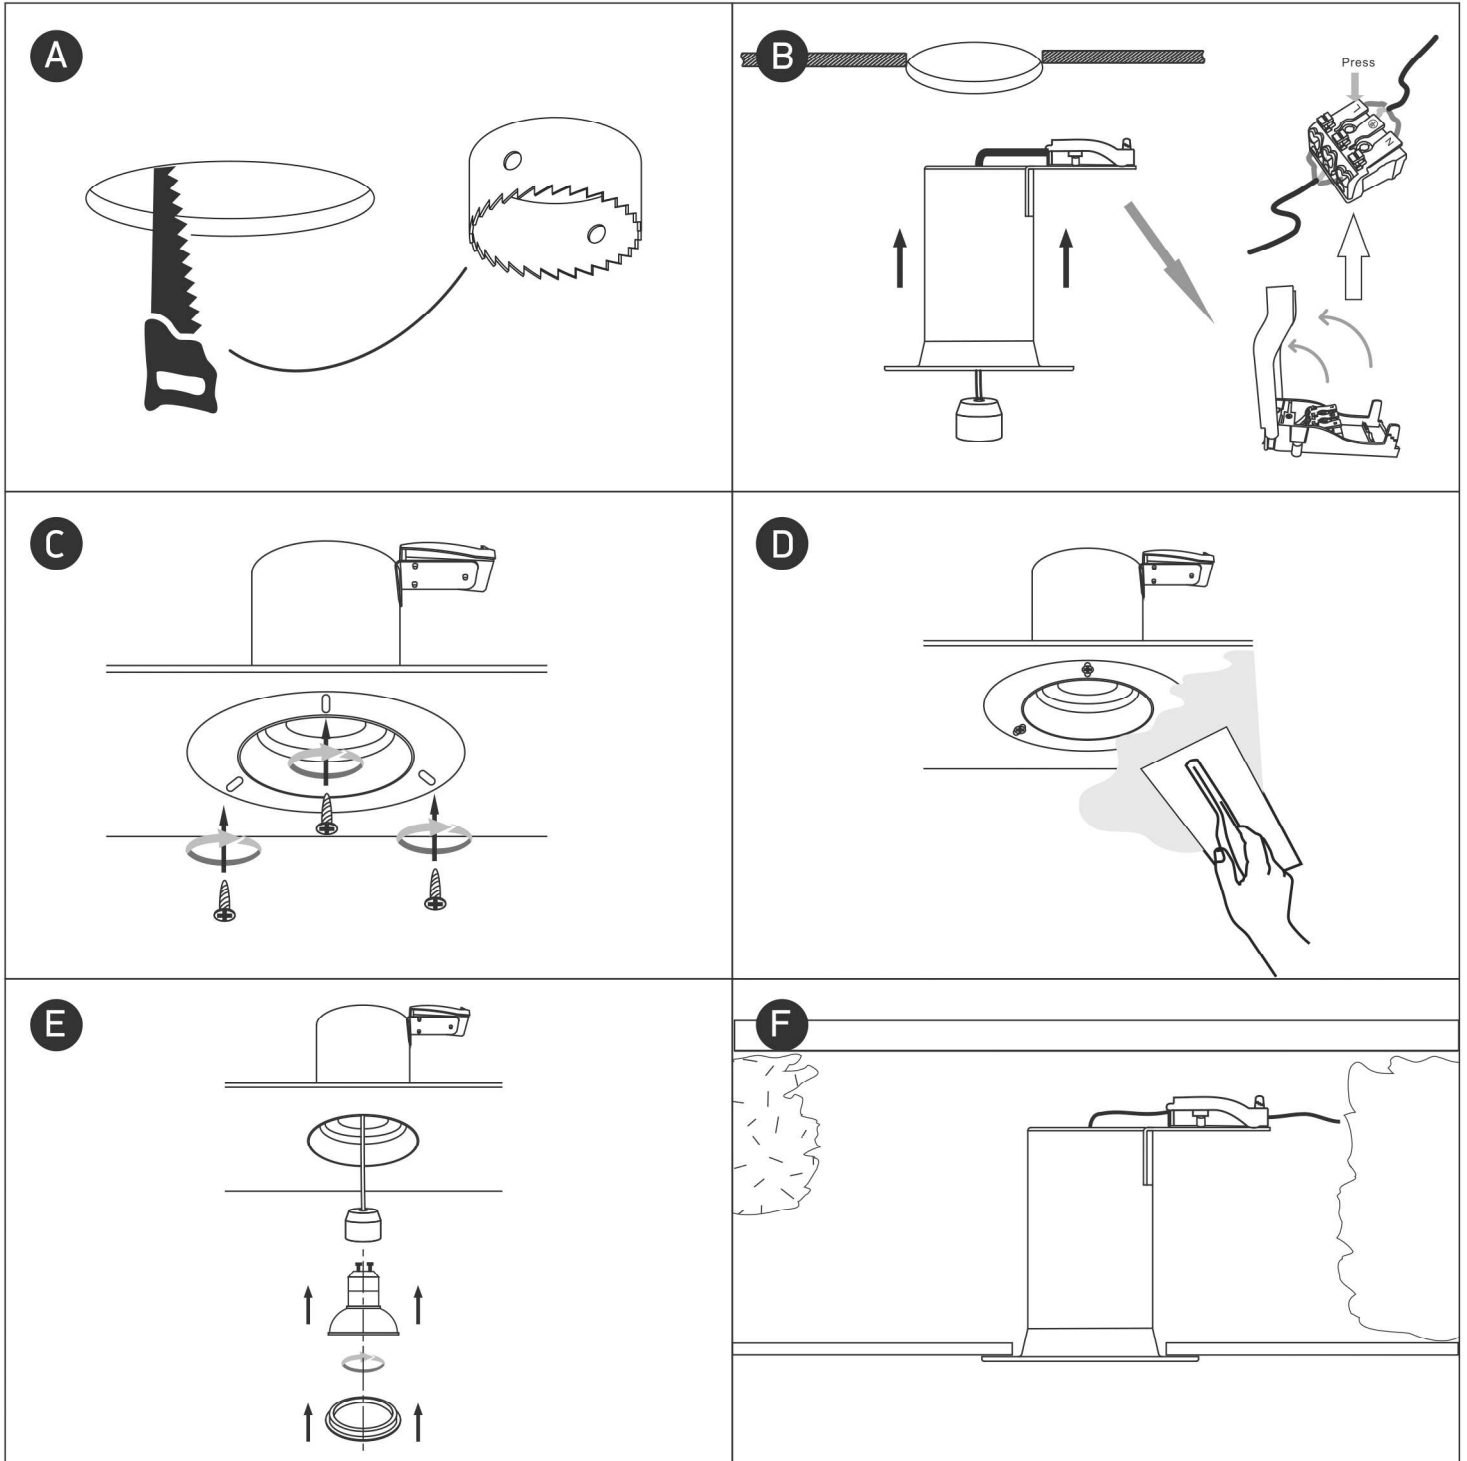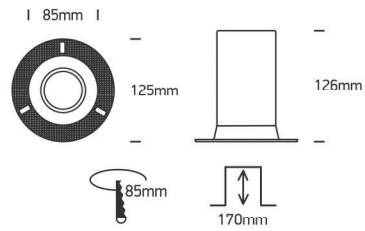  

Warnings:



1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.

INSTALLATION MANUAL

11105F



100-240V | MR16 | GU10 | 10W | IP20 | Trimless | Fire Rated | Die cast | Adjustable

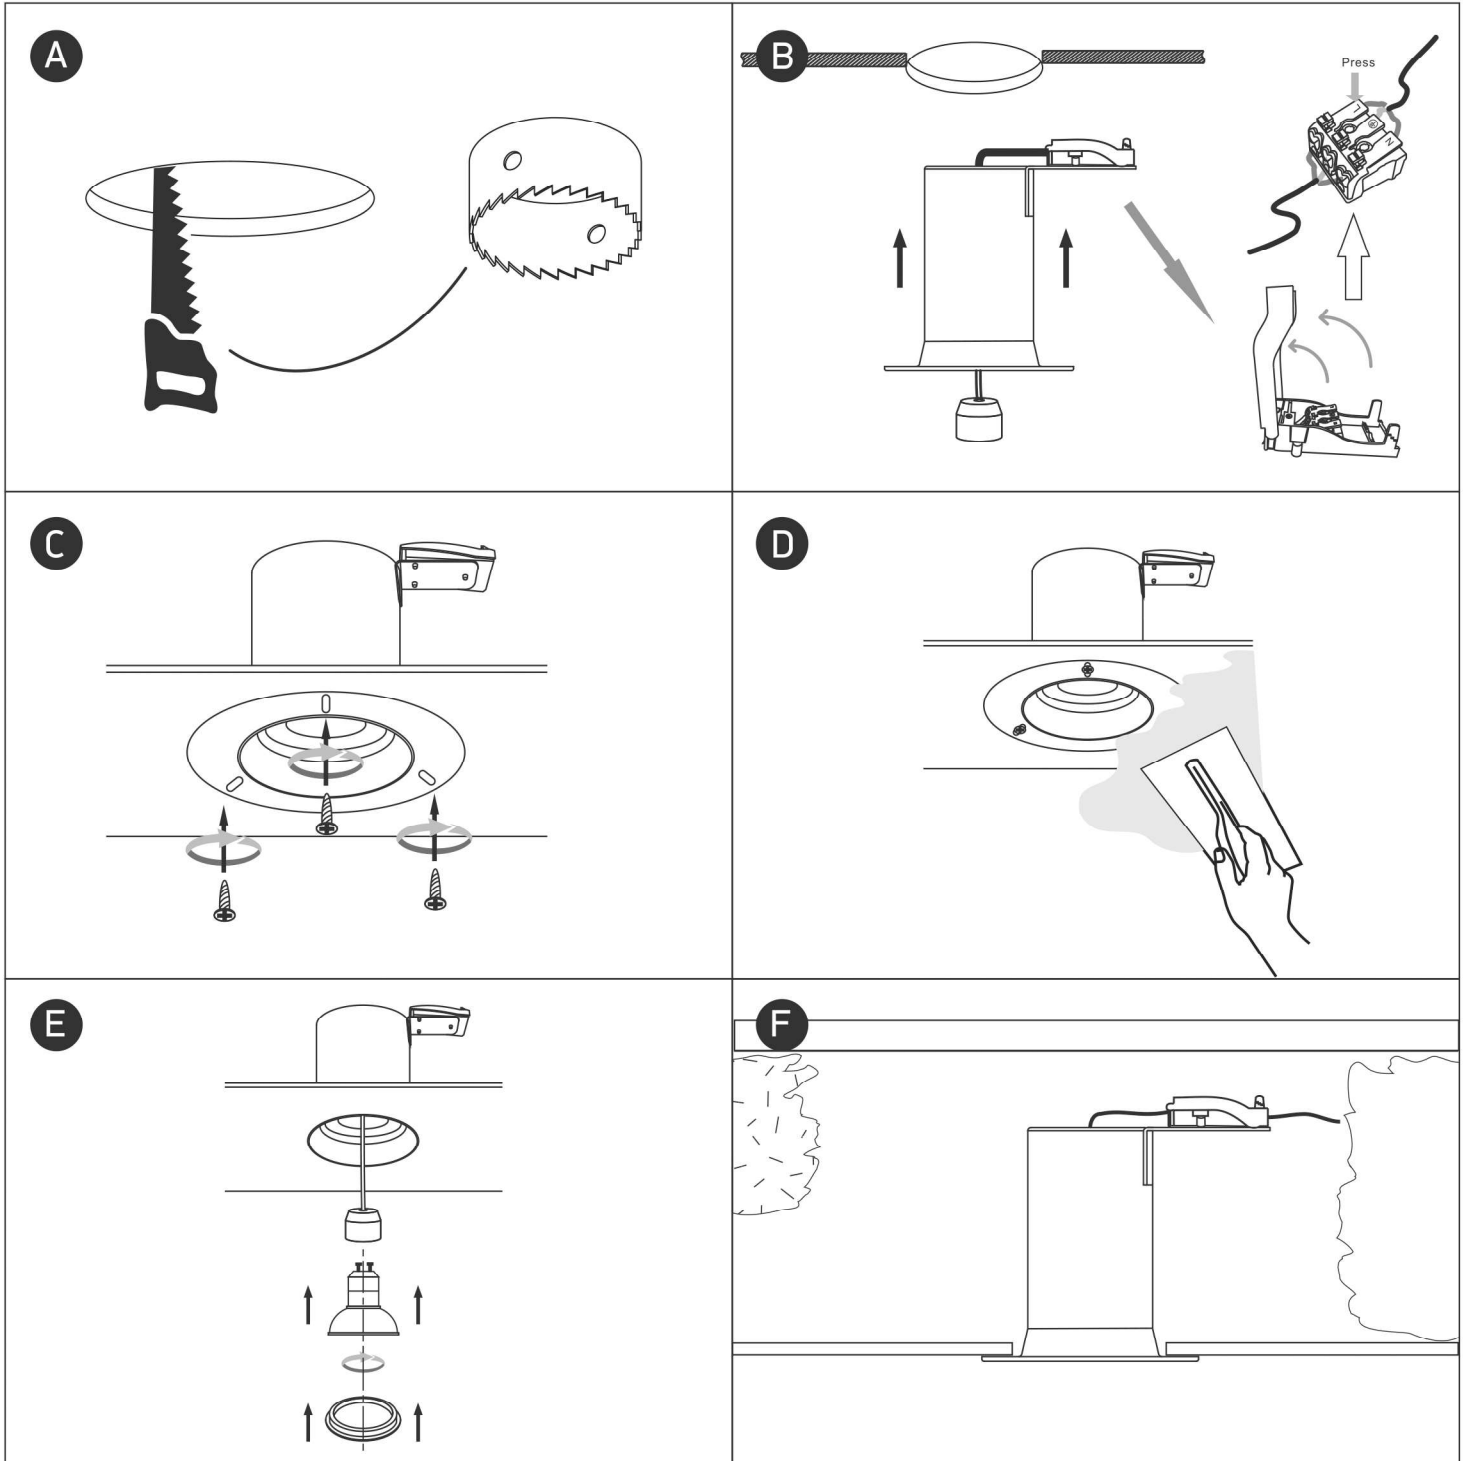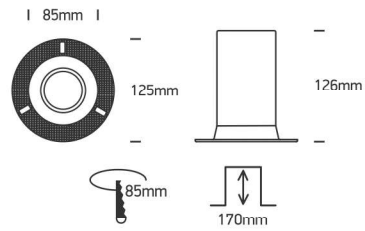  

Warnings:



1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.

INSTALLATION MANUAL

11105F



100-240V | MR16 | GU10 | 10W | IP20 | Trimless | Fire Rated | Die cast | Adjustable

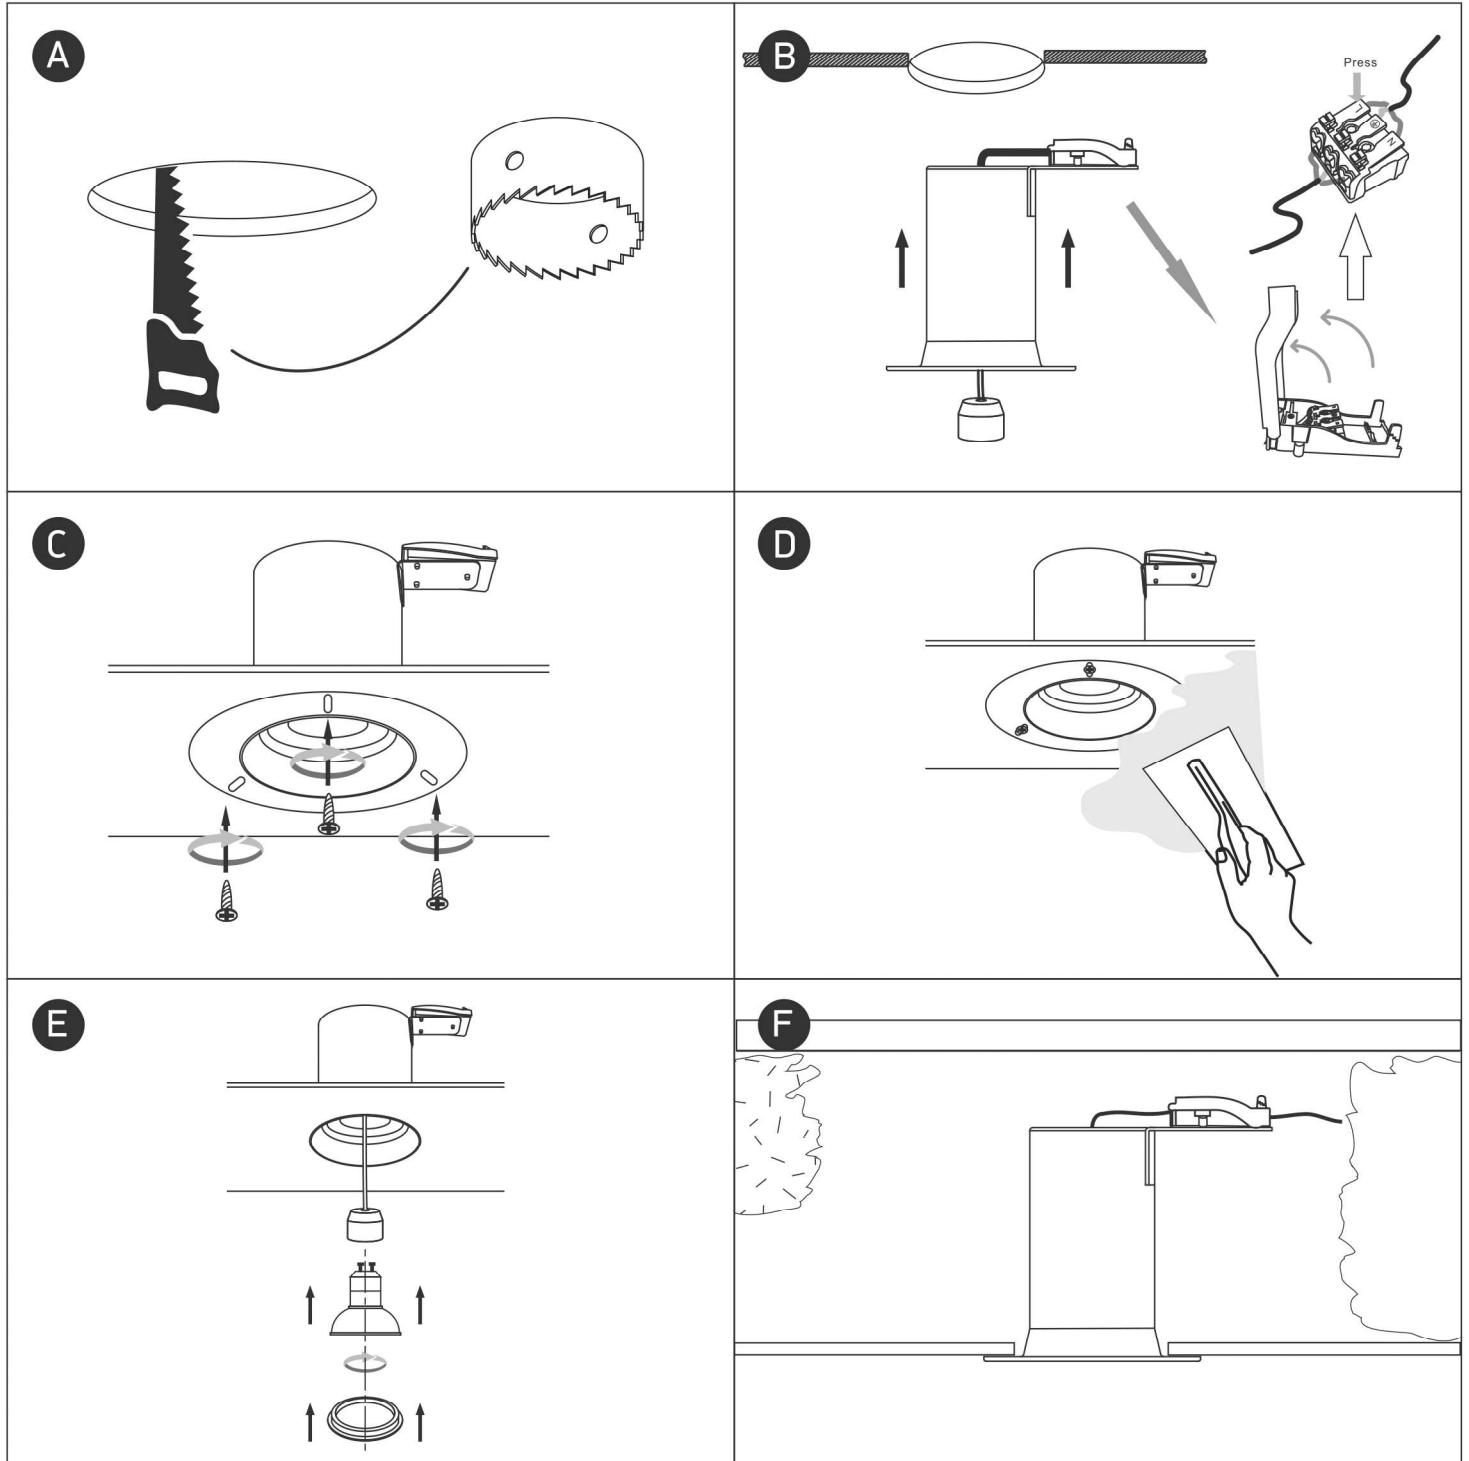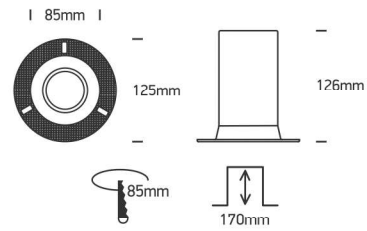  

Warnings:



1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.

INSTALLATION MANUAL

11105F



100-240V | MR16 | GU10 | 10W | IP20 | Trimless | Fire Rated | Die cast | Adjustable

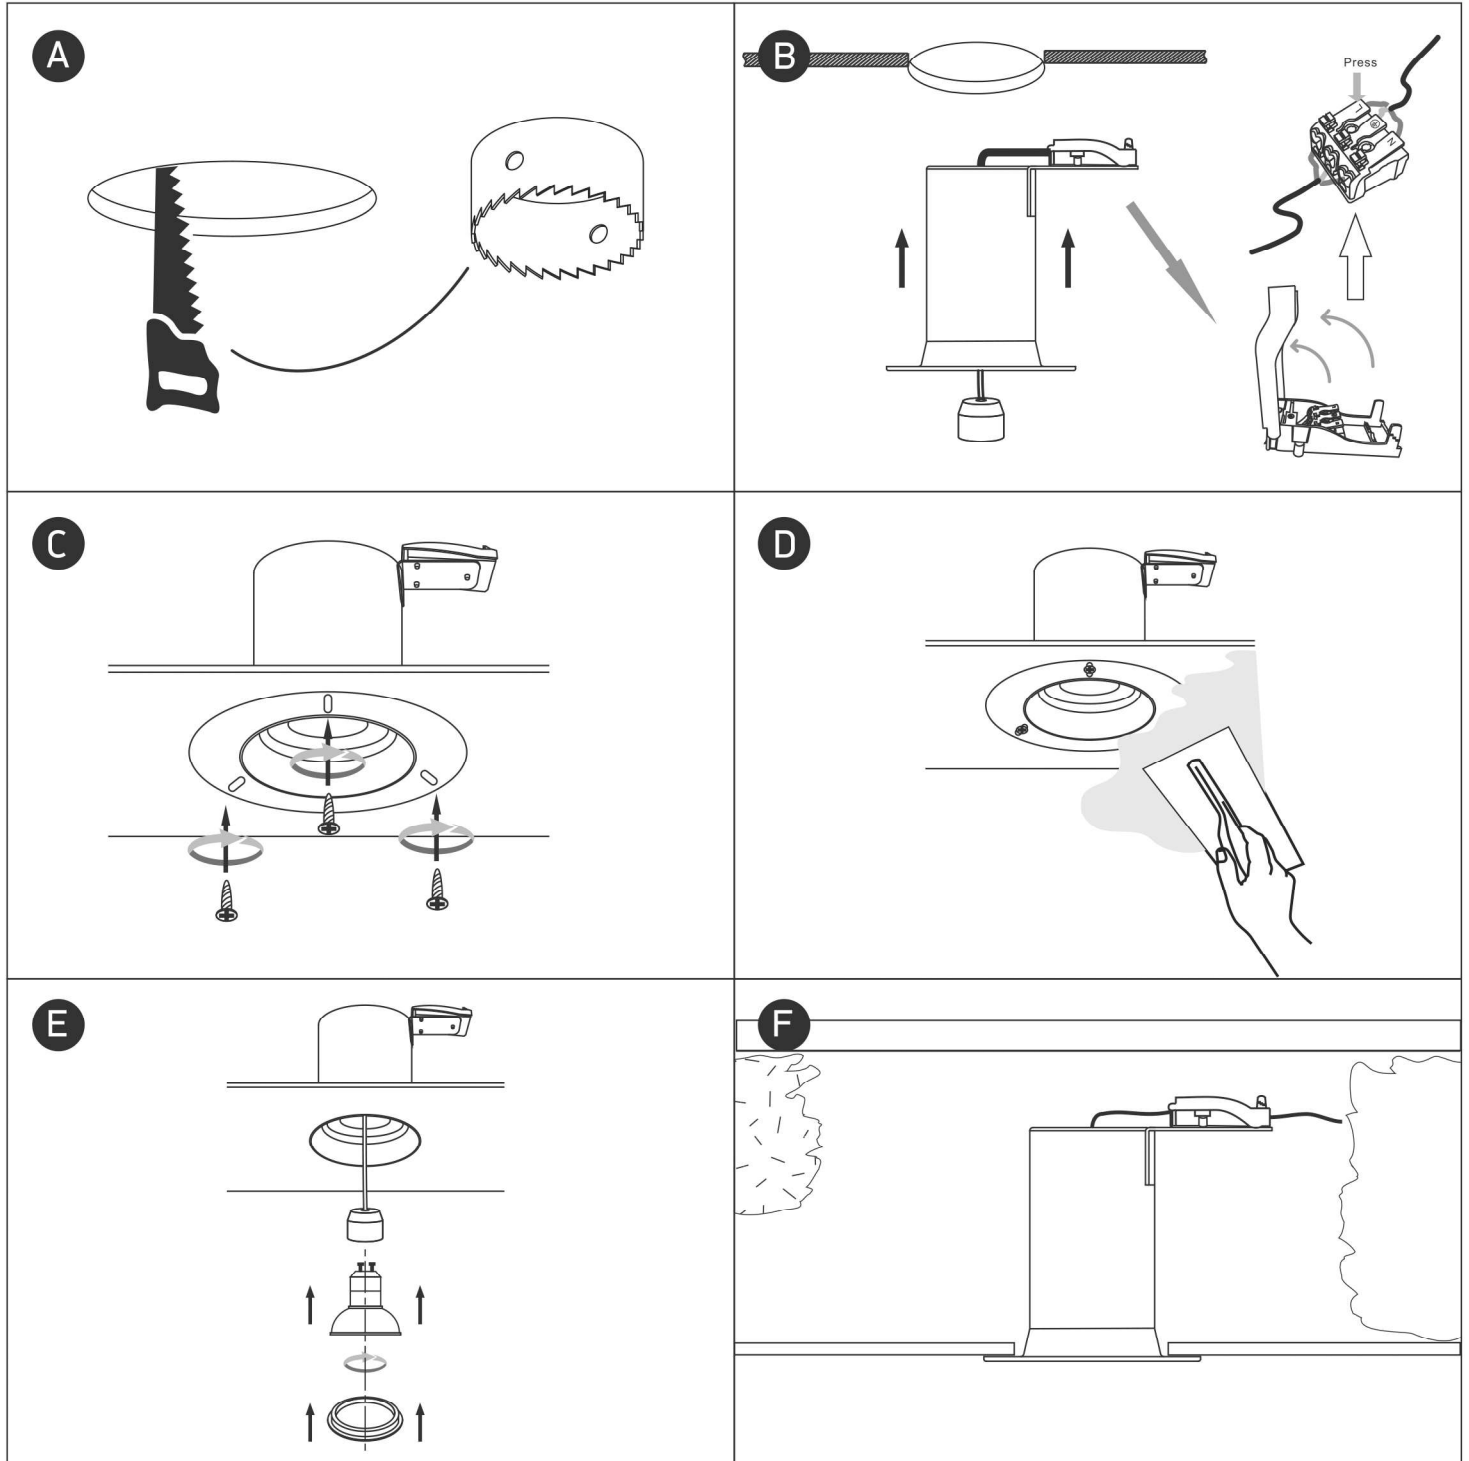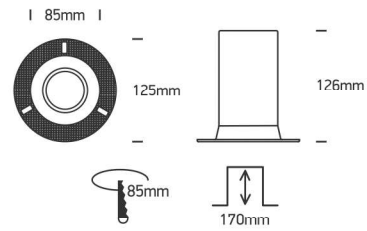  

Warnings:



1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.

INSTALLATION MANUAL

11105F



100-240V | MR16 | GU10 | 10W | IP20 | Trimless | Fire Rated | Die cast | Adjustable

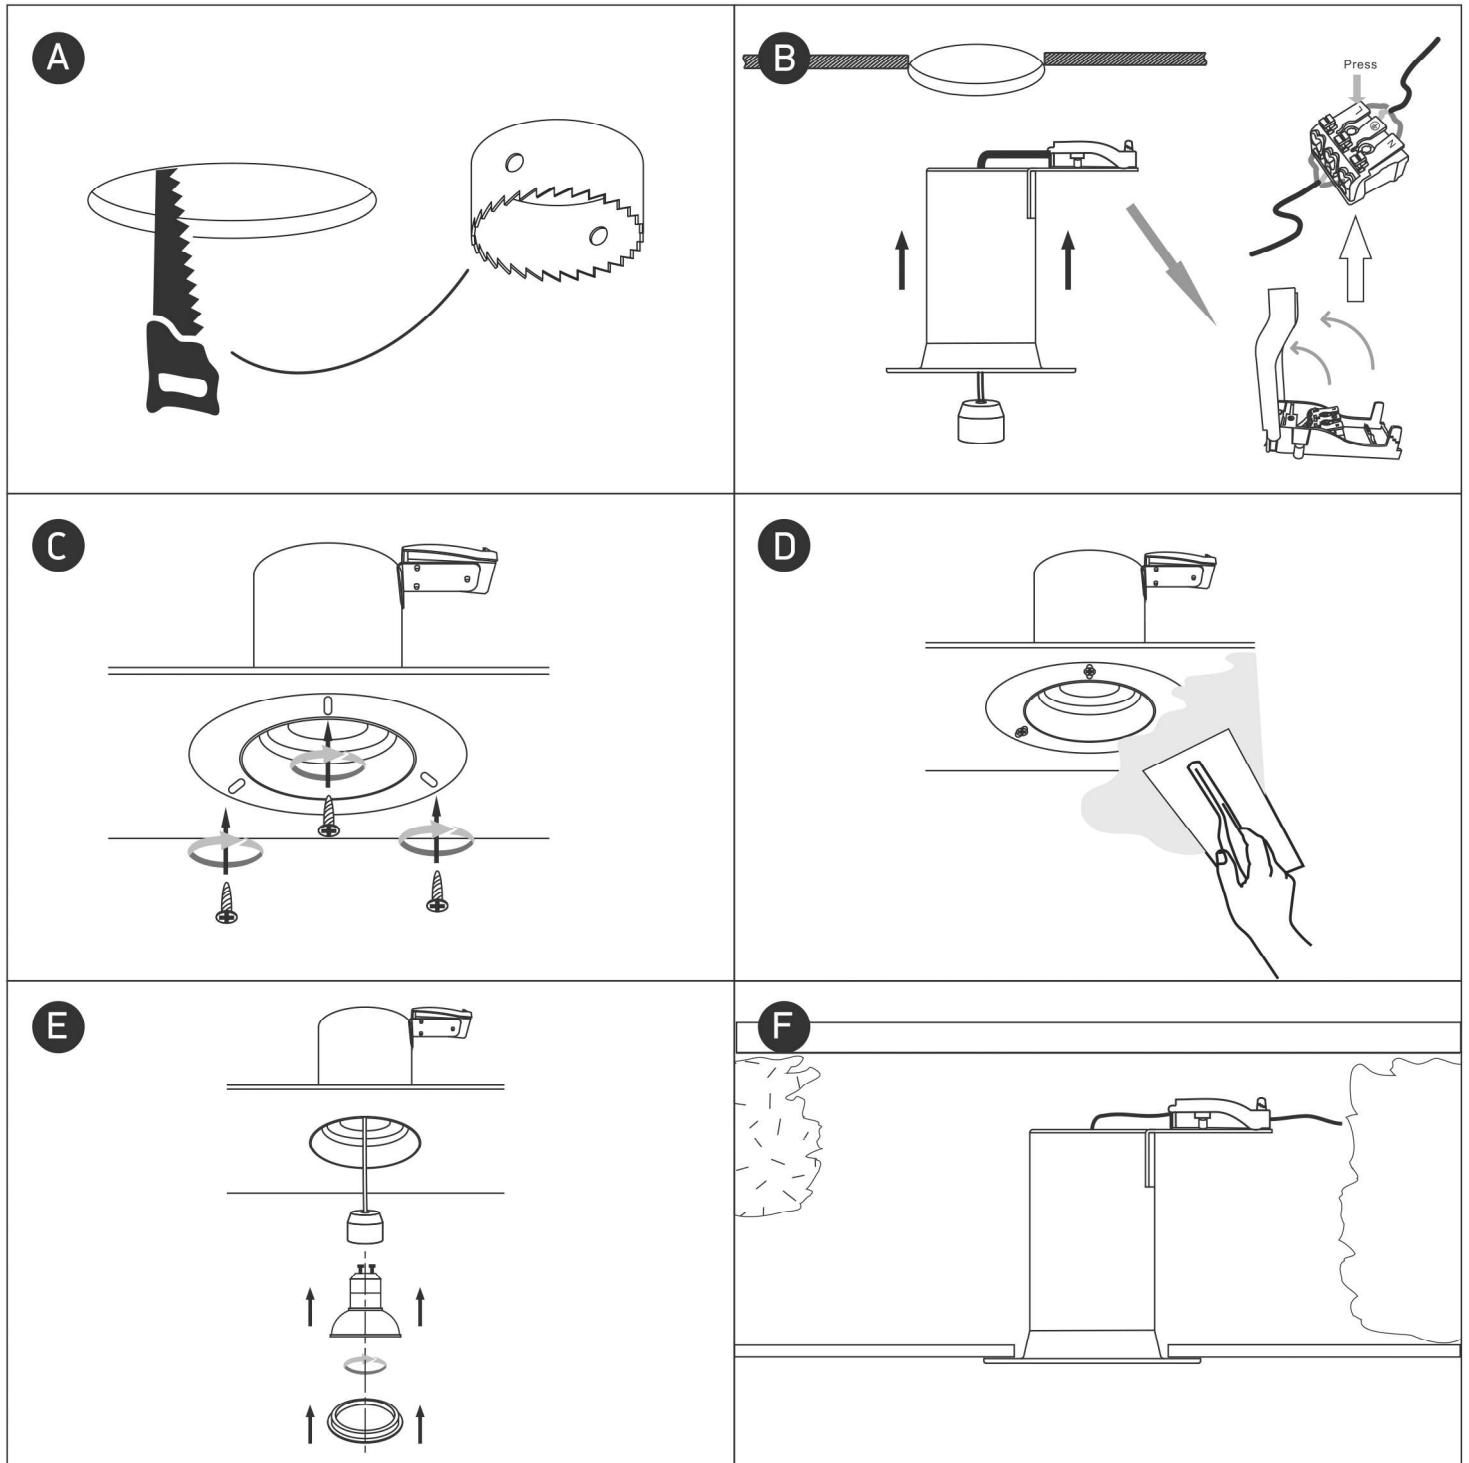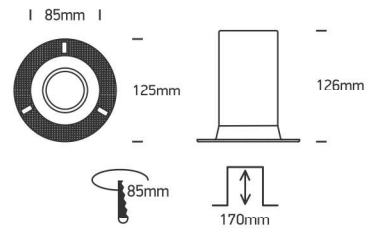  

Warnings:



1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.

INSTALLATION MANUAL

11105F



100-240V | MR16 | GU10 | 10W | IP20 | Trimless | Fire Rated | Die cast | Adjustable

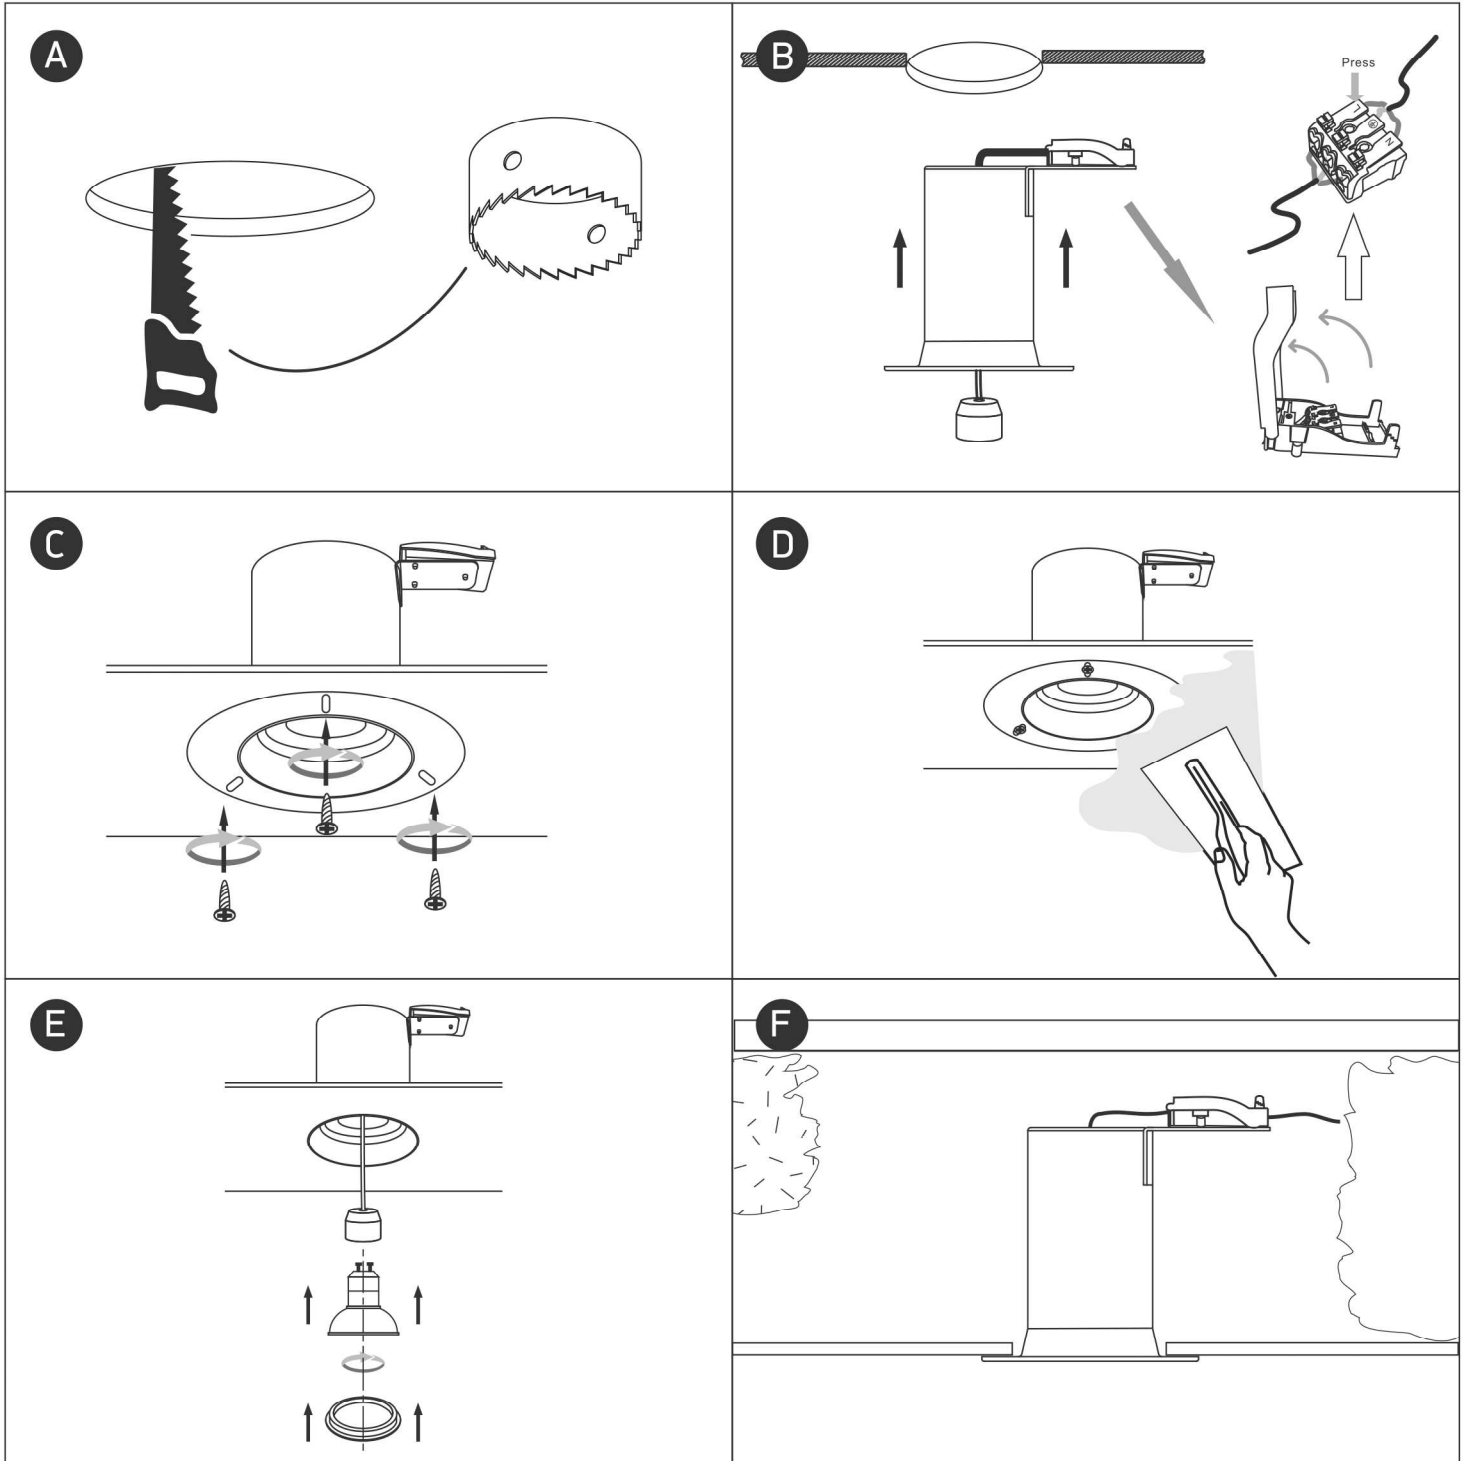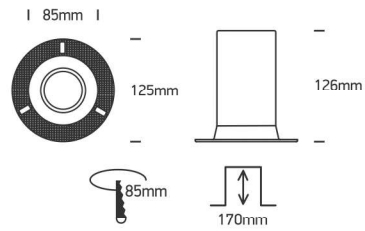  

Warnings:



1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.

INSTALLATION MANUAL

11105F



100-240V | MR16 | GU10 | 10W | IP20 | Trimless | Fire Rated | Die cast | Adjustable

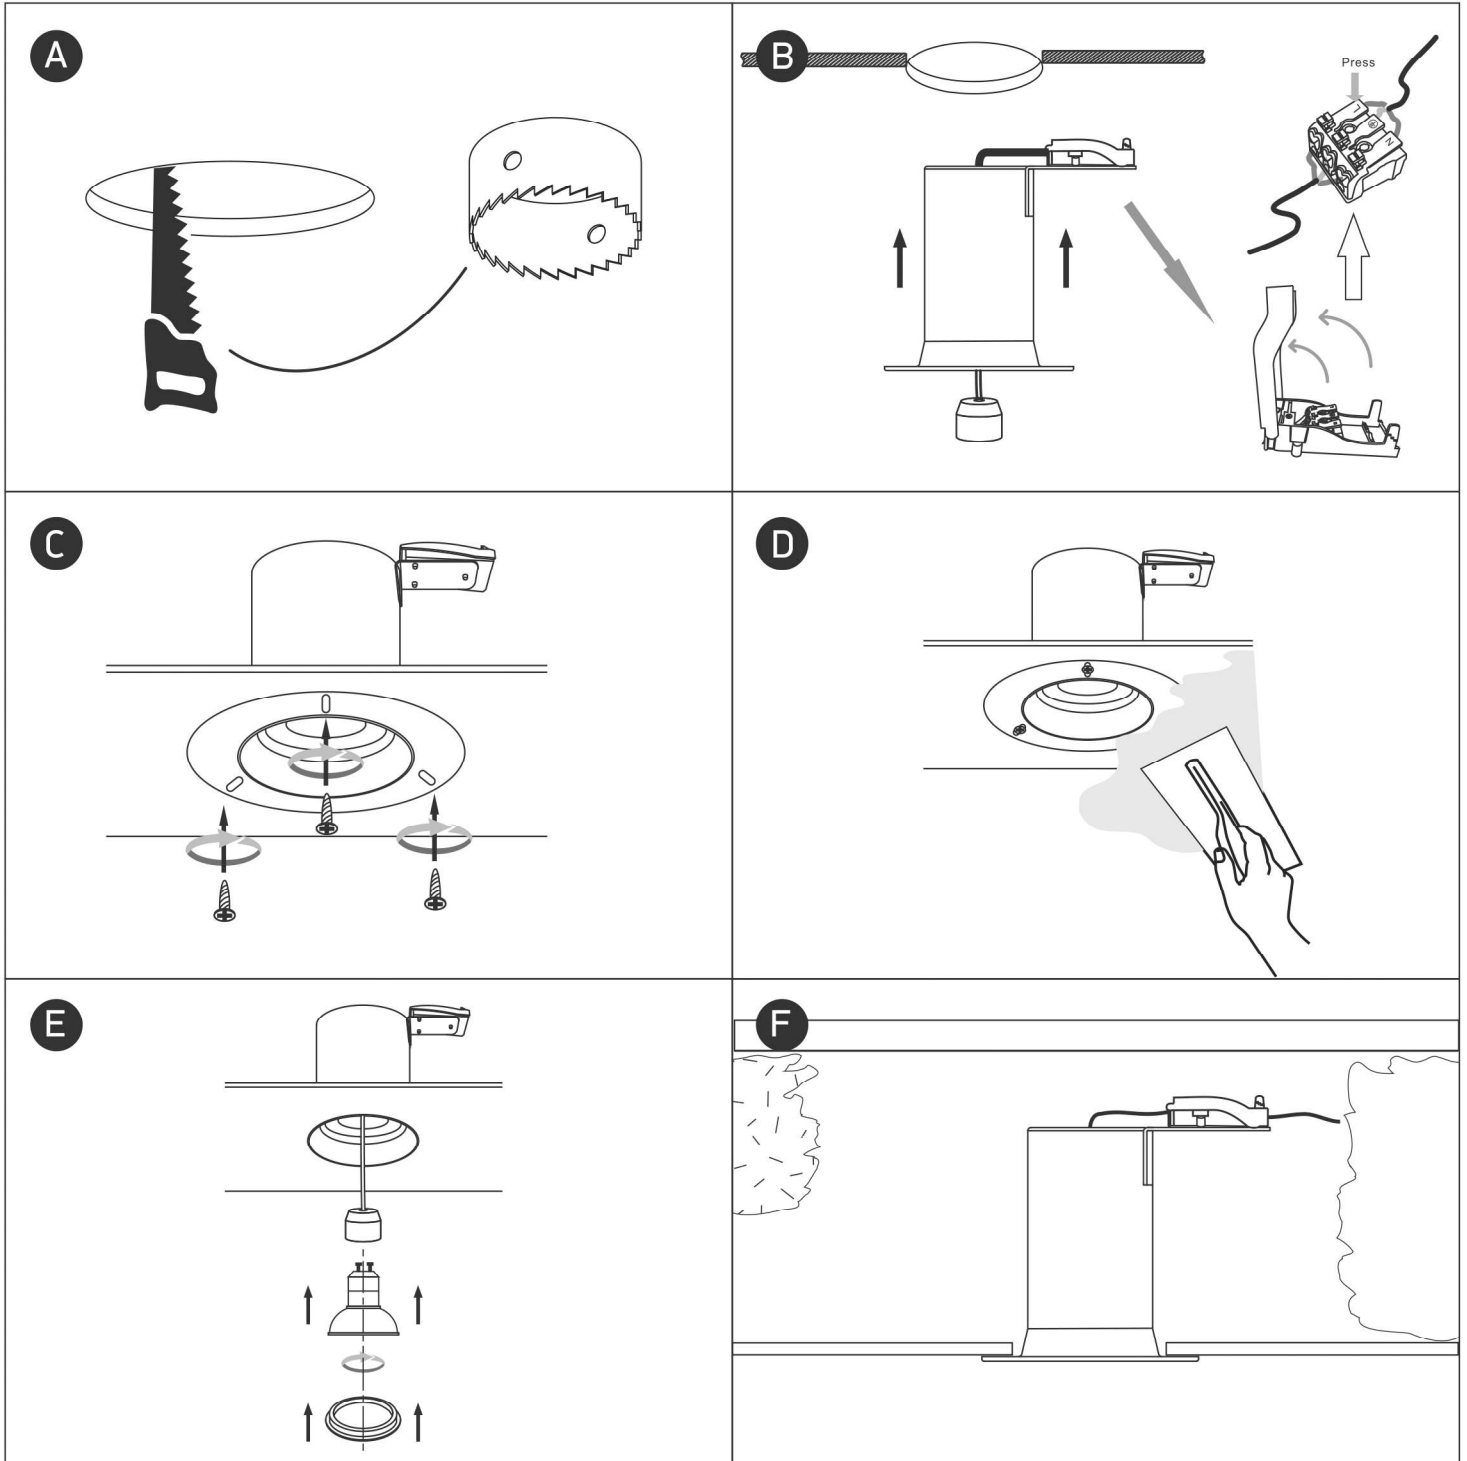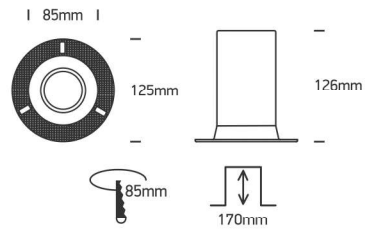  

Warnings:



1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.

INSTALLATION MANUAL

11105F



100-240V | MR16 | GU10 | 10W | IP20 | Trimless | Fire Rated | Die cast | Adjustable

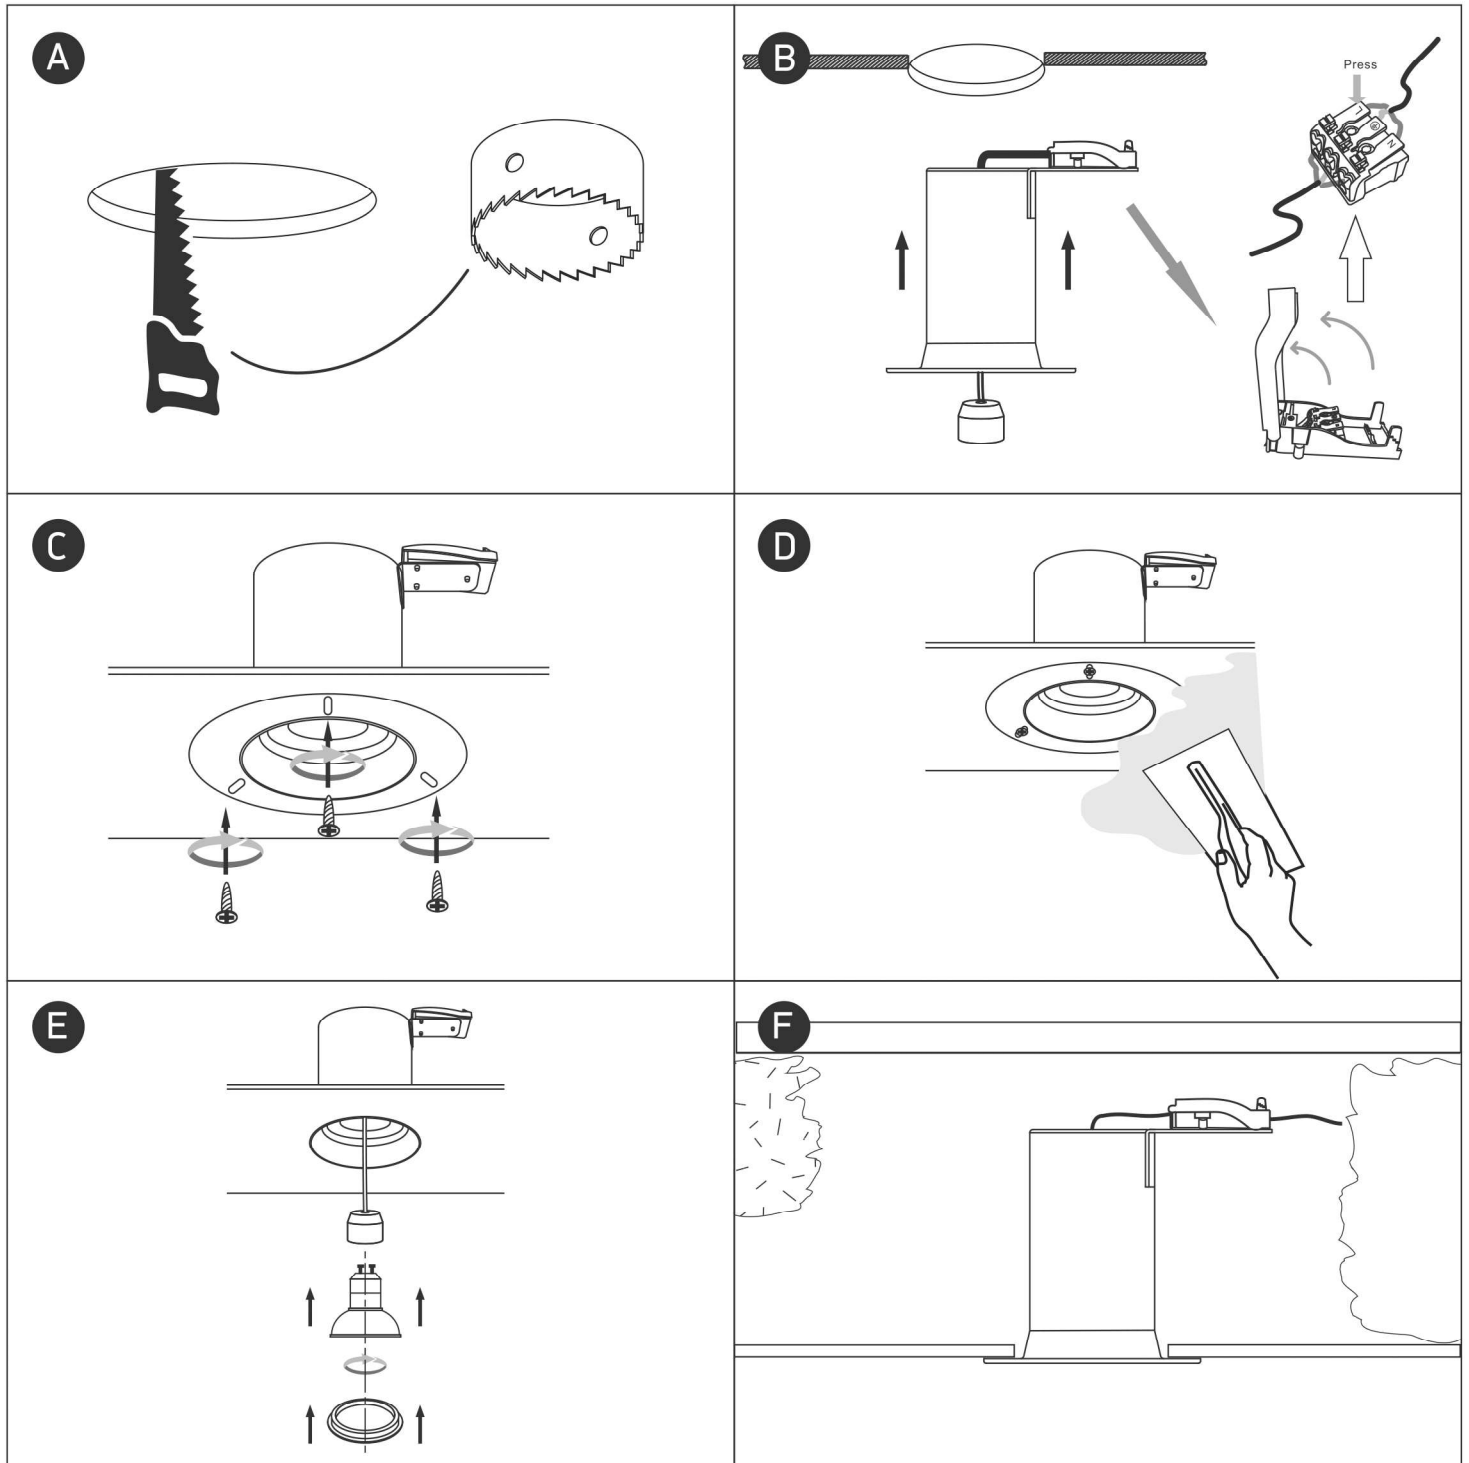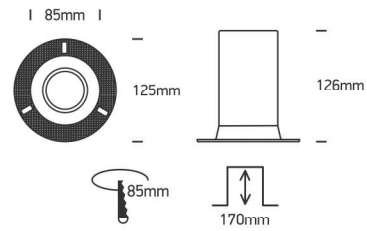  

Warnings:



1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.

INSTALLATION MANUAL

11105F



100-240V | MR16 | GU10 | 10W | IP20 | Trimless | Fire Rated | Die cast | Adjustable

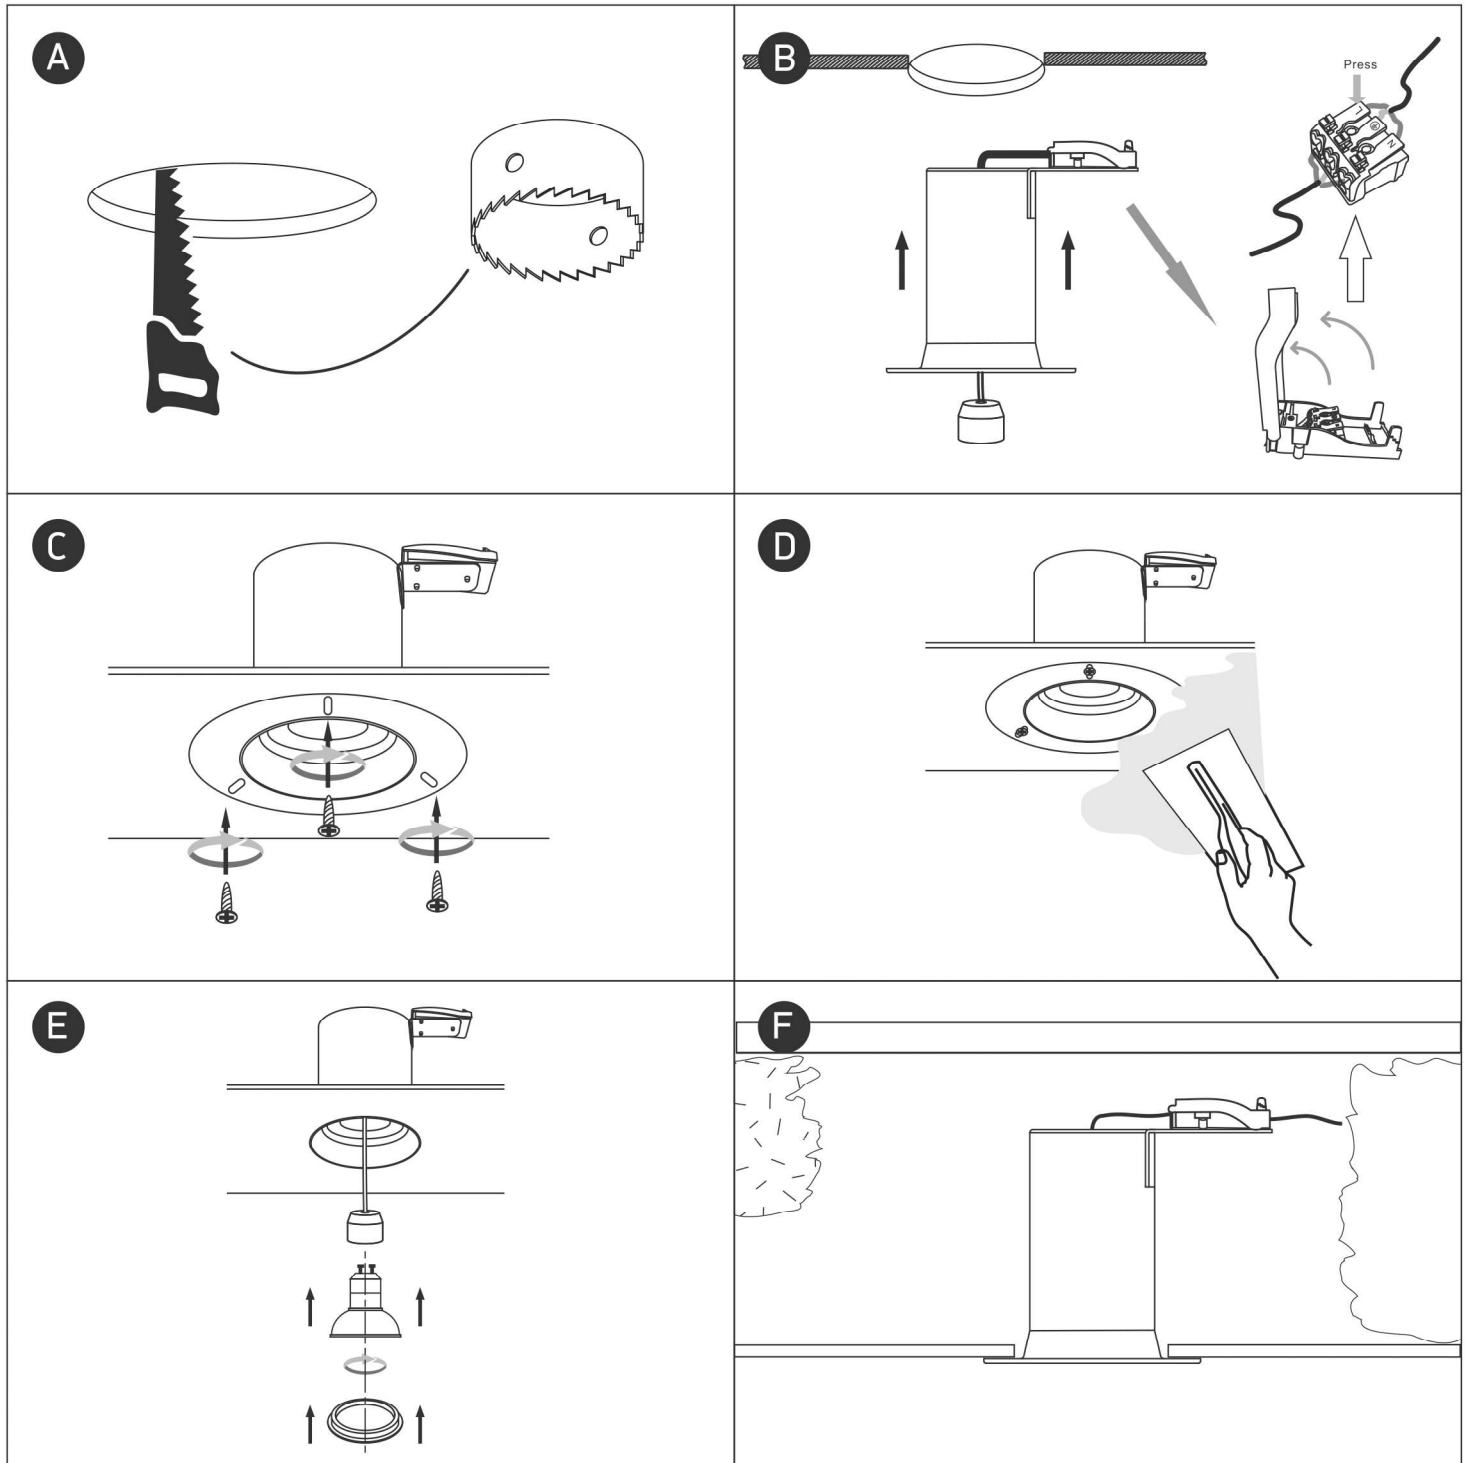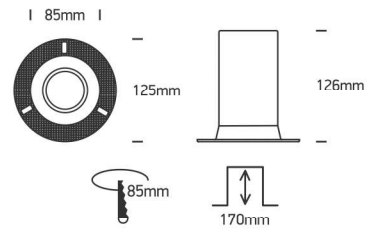  

Warnings:



1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.

INSTALLATION MANUAL

11105F



100-240V | MR16 | GU10 | 10W | IP20 | Trimless | Fire Rated | Die cast | Adjustable

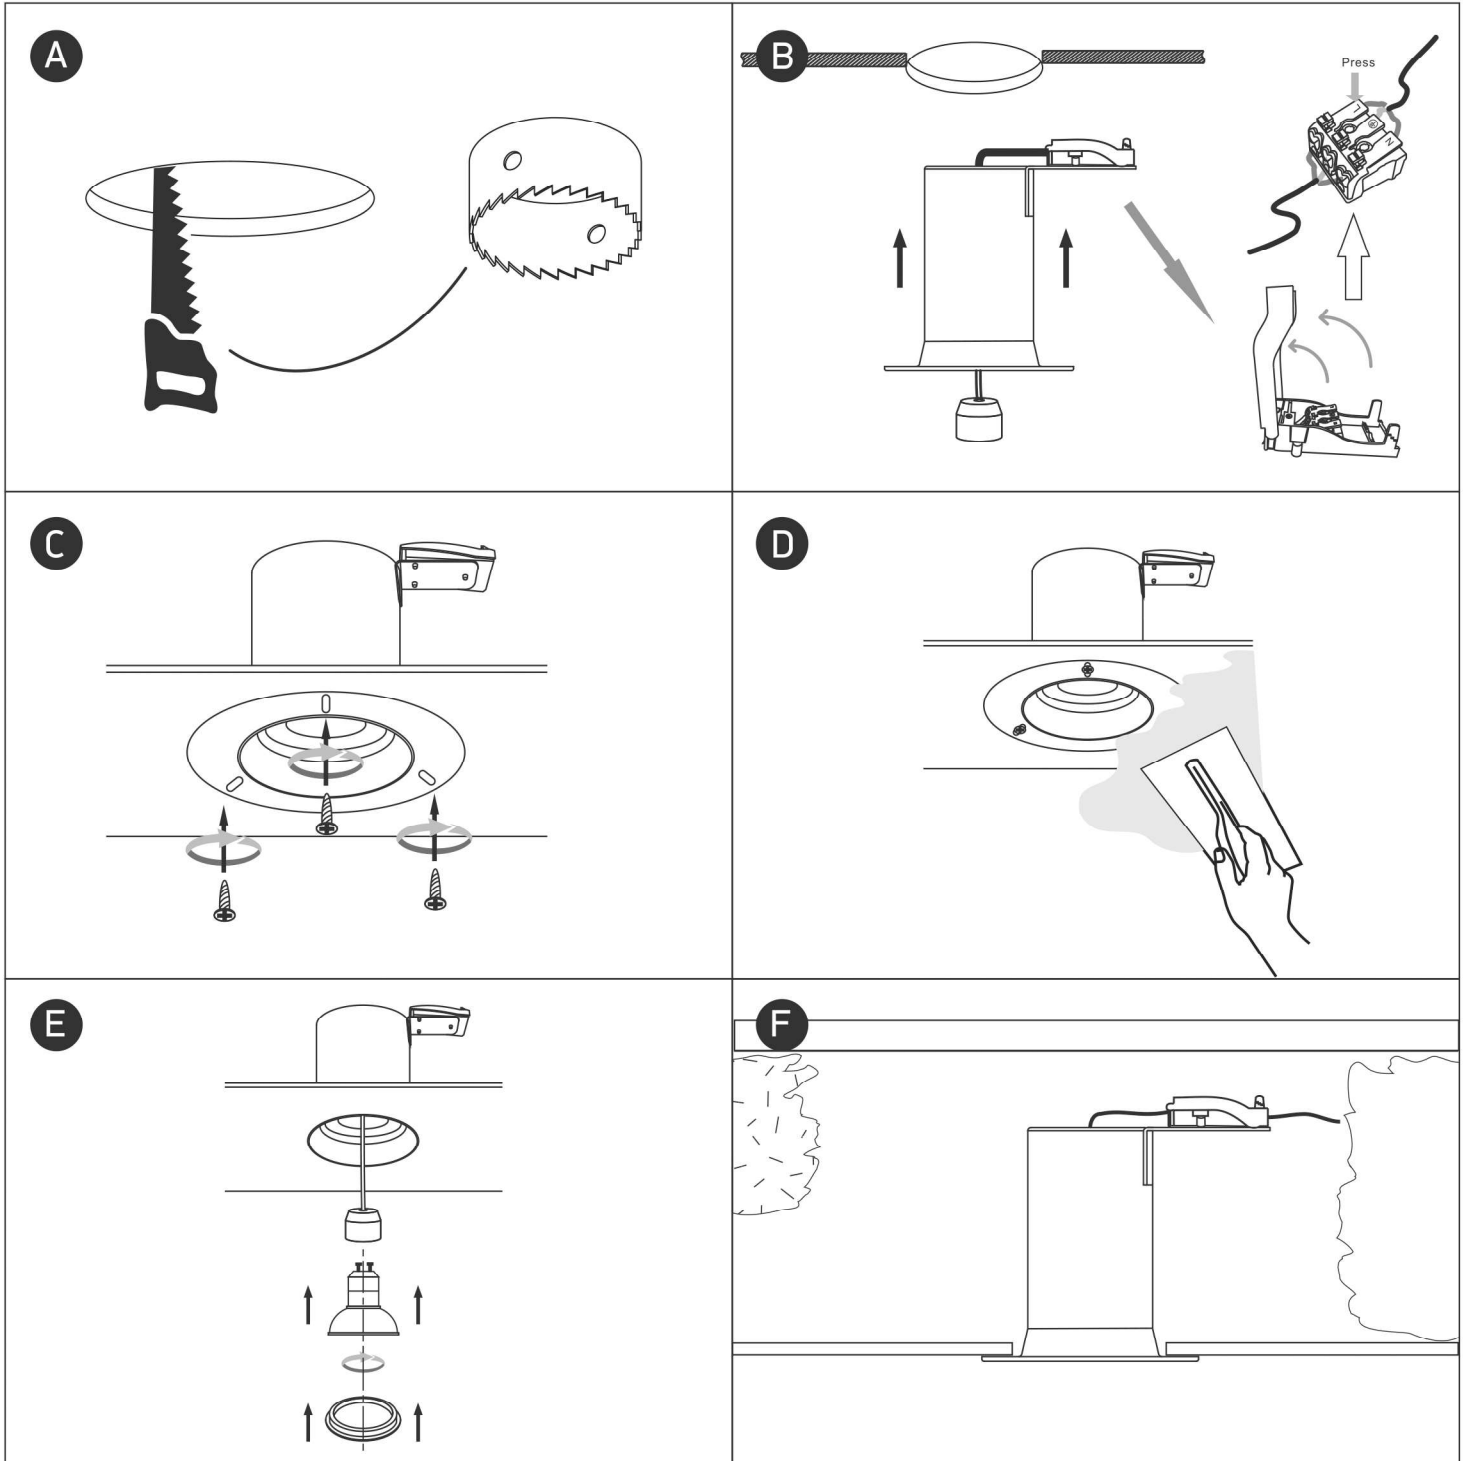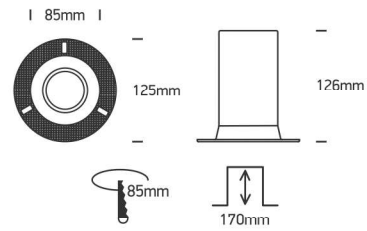  

Warnings:



1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.

INSTALLATION MANUAL

11105F



100-240V | MR16 | GU10 | 10W | IP20 | Trimless | Fire Rated | Die cast | Adjustable

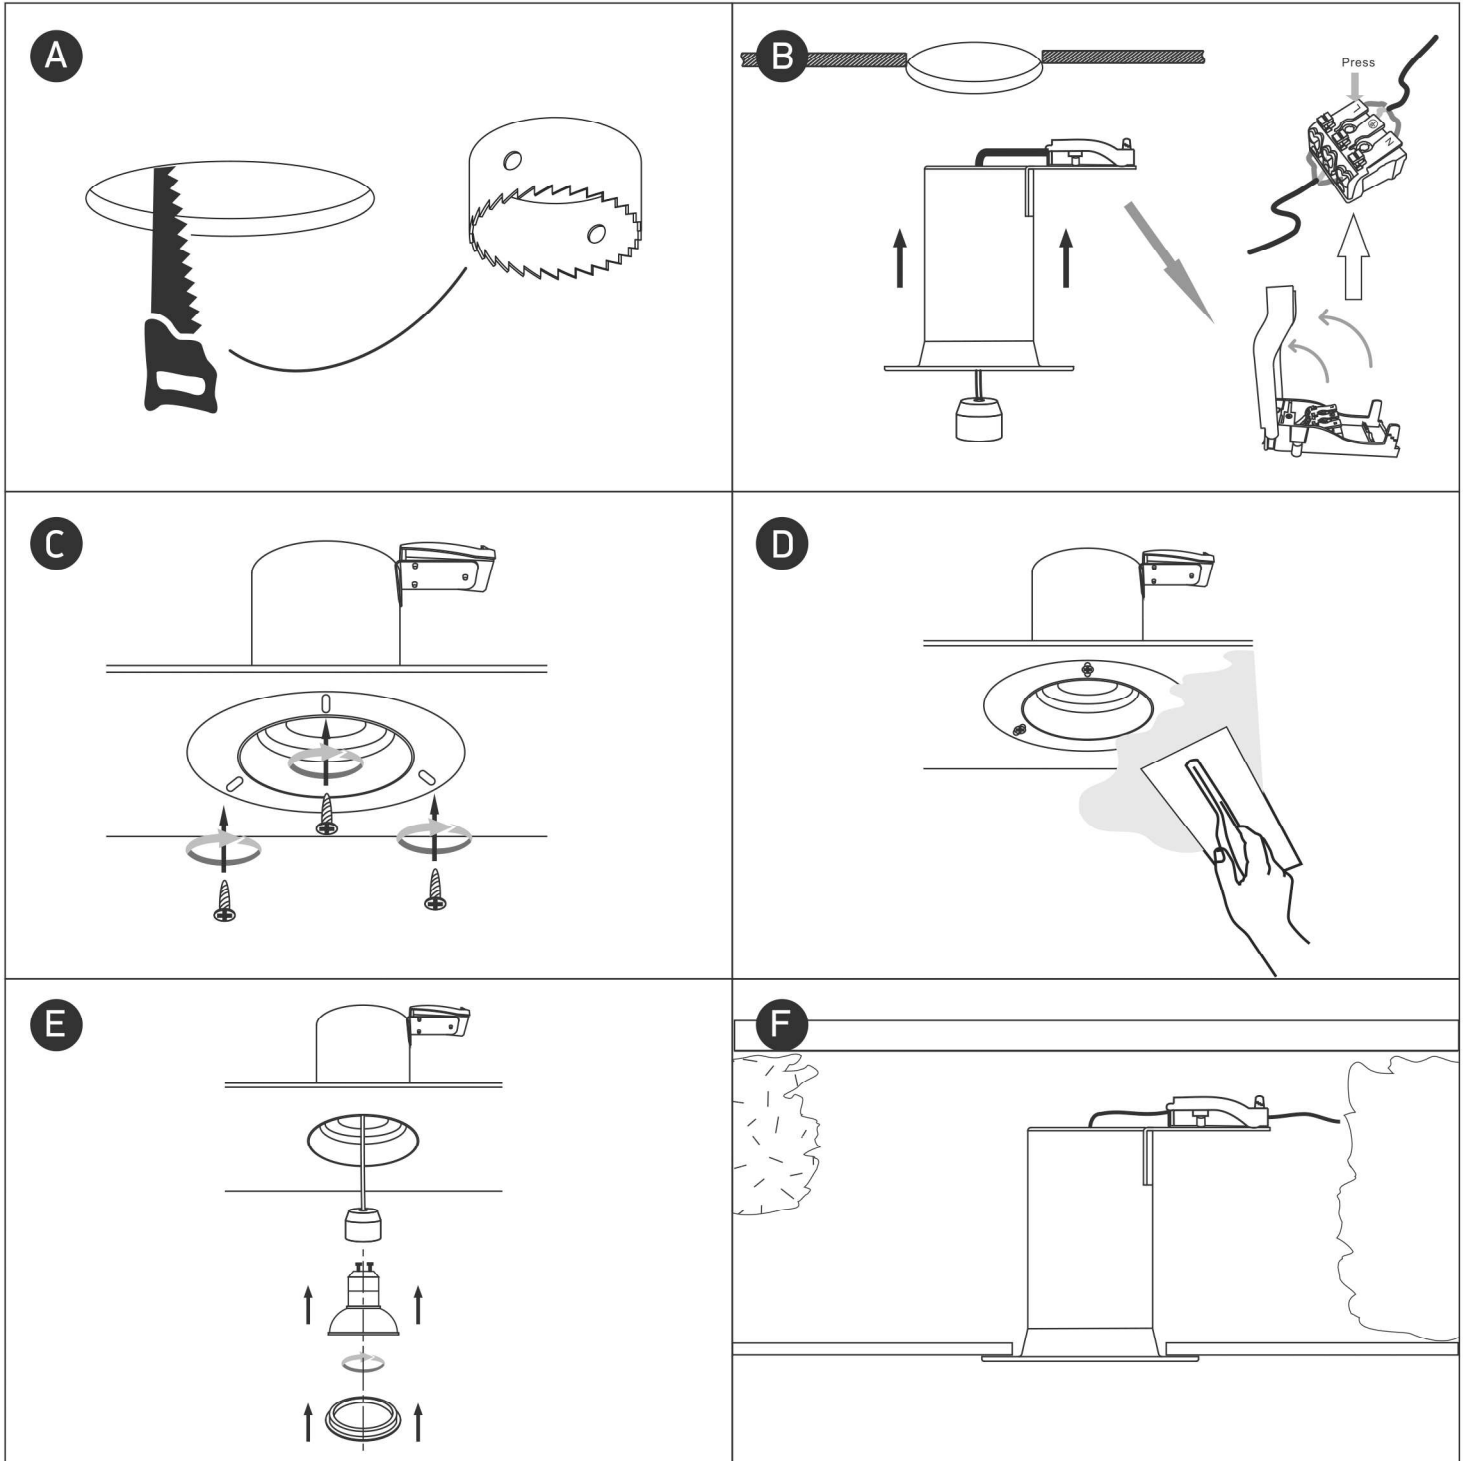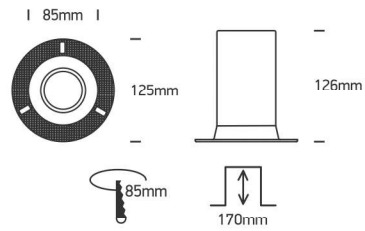  

Warnings:

1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.