



## IMPORTANT - Pay attention

- 1. When using the wireless charing function, make sure that the device you are using is able to charge wirelessly. When charging, make sure to place the device in the center of the wooden pad. When the device begins to charge, a beep and buzz will occur. If the device continuously beeps, that indicates that the device needs to be readjusted on the wooden pad. When it is properly placed, there should only be one beep.
- 2. USB charging will not work when the wireless charging is working.
- 3. Since the wireless charging device is equipped with a foreign object detection function, please do not put any metallic objects, such as coins, on the wooden pad. Doing so could potentially affect the wireless/ USB charging functions.

## LIGHT SOURCE - FUENTE DE LUZ SMD LED 7W 3000K MAX 500lm INCL

## TECHNICAL FEATURES - CARACTERISTICAS TÉCNICAS



















