

Installation

Existing fittings must be completely removed before installation of a new product. Before removing the existing fitting, carefully note the position of each set of wires.

Note that the power needs to be isolated/switched off at the fuse board.

Ensure that the screws and cable entry points are sealed to maintain the IP rating of the product.

- There colour bezels can be replaced, purchase your preferred bezel colour according to the product model. black color bezel is supplied in product, White bezel, Silver bezel, **see Fig. 1**.
- This product is colour changing and can be either warm white (**3000K**) or cool white (**4000K**) or daylight white (**6500K**). Choose your preferred colour before installing by using the CCT switch. **see Fig. 2**.
- **See Fig. 3**. Select a mounting location for the product and cut a mounting hole 75mm diameter in the wall care not to foul any pipes, mains cables or joists beneath the surface. It is always recommended to cut the hole slightly smaller than the size specified, and then file the hole until the recessed unit fits snugly.
- The Minimum wall void depth is 40mm. When more than one wall light is installed, the minimum distance between units is 500mm. The unit must be located a minimum distance of 50mm from a joist.
- Ensure free movement of air by removing void insulation from at least 150mm from around the hole. Under no circumstances must these fittings be covered with insulating matting or similar material.
- Pass the incoming supply cable through the cut out and through the housing supplied. Wire as detailed wiring.
- Ensure that the product is sitting properly in the hole.
- Switch on. Your light is now ready for use.

Fig. 1

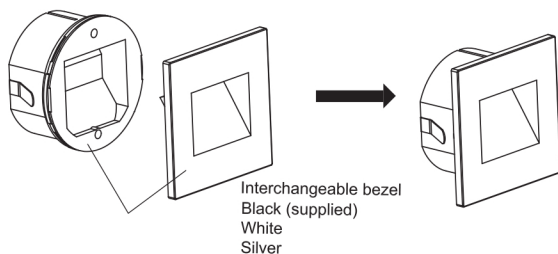


Fig. 2

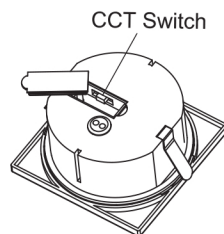


Fig. 3

