

To link your remote to the lamps

1. Place and connect your lamp into the Downlight.
2. Turn on the mains power (switch or pull cord)
3. Short press one of the zone buttons. If they are all on one zone short press the I button above the number 1.

If you are only having 1 zone move on to step 4

If they are on separate zones you will need to repeat this step but short press the I button above the number 2. This would mean you have 2 zones set up.

Repeat again for 3 and 4 if more zones are required.

4. bulbs should have flashed 3 times. This means the lamps are now synced to the remote.

To unlink the remote from the lamps

1. Turn the mains power off then back on.
2. Long press the I button above the zone you wish to unlink.
3. The lamp will flash 9 times and will finish by staying on the colour red. This confirms the lamp is now unlinked from the remote.