





Screw the fitting frame in the ceiling cut-out with the back-mounted sieved metal sheet

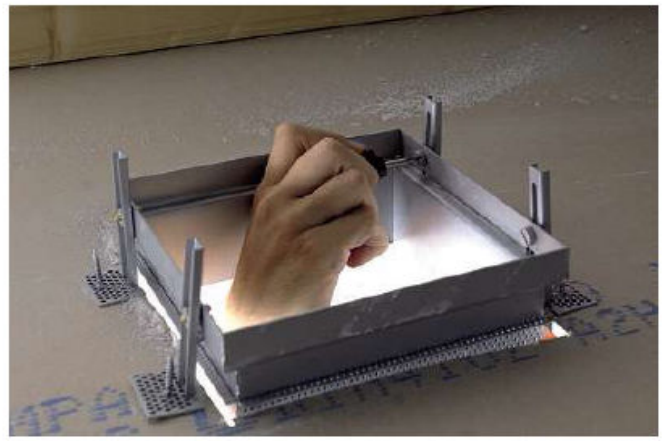

Adjustment of the fitting frame in the ceiling cut-out and fixation of the position with the four setting screws.

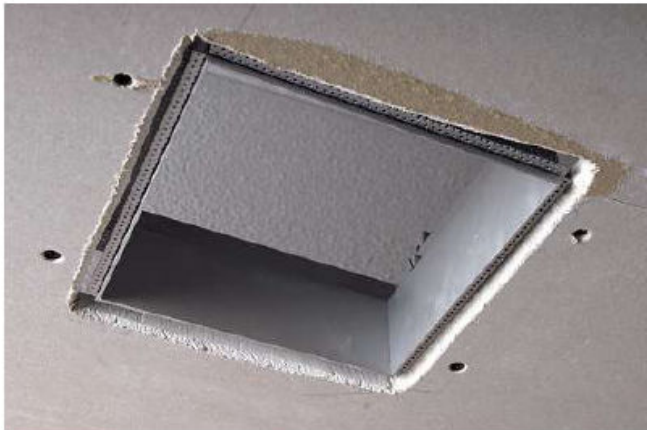

The fitting frame should be flush mounted with the ceiling level




Plaster up the gap between fitting frame and ceiling.



After sanding down the surface, paint over with wall colour. After suitable primer coating the fitting frame can be painted in the same wall colour.



Insertion and adjustment of the bulb housing in the fitting frame with the setting screws.

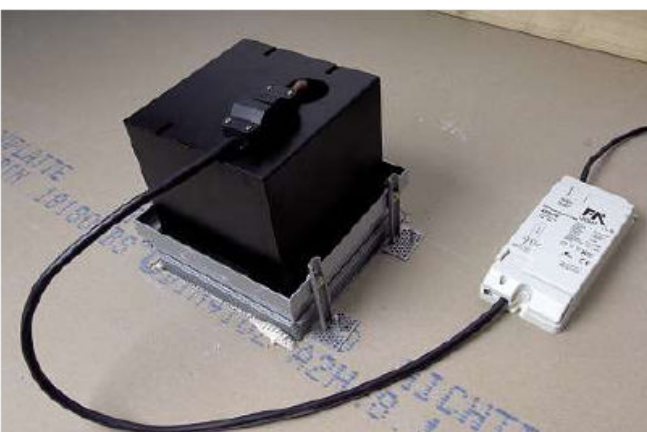

Rear view of the completely installed fitting.



Insertion of the bulb.