Cleaning:

- > Clean this light fitting only with a soft dry cloth
- > Do not use any chemical or abrasive cleaners.

Lamp replacement:

- > Switch off the electricity at the mains.
- > Remove the circlip on the front of the fitting to release the lamp

Low Voltage

MR16 GU5.3

50 W

12 V

- > Carefully pull the lamp out of the lampholder—do not twist.
- > Push new lamp into lampholder.
- > Locate the lamp in the fitting and re-fit the circlip.
- > Restore the power and switch on.

Replacement lamp type:

Wattage: Supply Voltage: Type: Mains 240V

240 V GU10 Note: Do not use GZ10 Lamps with this fitting

If you experience problems:

If your light is defective or develops a fault, please return it to the place where you bought it. You can call our Helpline for advice. The Helpline will gladly give advice on any aspect of any Eterna Lighting product but may not be able to give specific instructions regarding individual installations. If in doubt, consult a gualified electrician.

Help line:

Tel: 01933 673 144 Fax: 01933 678 083 Email: <u>sales@eterna-lighting.co.uk</u> For answers to frequently asked questions (FAQs) and other information visit our web-site <u>www.eterna-lighting.co.uk</u>

Eterna IMPORTANT! Safety and Installation instructions

Downlight converter

Model(s) CR80BS / CR / SN / WH

Pack contents:

Downlight fitting	1
Converter plate	1
Low Voltage stirrup and lampholder assembly	1
GU10 Mains Voltage stirrup and lampholder assembly	1

PLEASE READ THESE INSTRUCTIONS BEFORE INSTALLING YOUR NEW FITTING

PLEASE RETAIN FOR FUTURE REFERENCE

Read this first:

- This light fitting must be installed in accordance with the Building Regulations making reference to the current edition of the IEE Wiring Regulations (BS7671). The Building Regulations may be obtained from HMSO or viewed and downloaded from <u>www.communities.gov.uk</u> following the link for Building Regulations.
- > If in any doubt, consult a qualified electrician.
- > Switch off the mains before commencing installation and remove the appropriate circuit fuse.
- > Use the Low Voltage stirrup and lampholder assembly only with a suitable 12V transformer (not supplied).
- > Do not connect the Low Voltage stirrup and lampholder assembly directly to the mains.
- If using the Low Voltage stirrup and lampholder assembly, check that the total Wattage of all lamps does not exceed the maximum marked on your transformer.
- > Suitable for indoor use only.
- > This product is only suitable for use in living areas (not for areas constantly subject to moisture).
- This product is suitable for installation on surfaces with normal flammability (indicated by the "F" in a triangle) e.g. wood, plasterboard, masonry. It is not suitable for use on highly flammable surfaces (e.g. polystyrene, textiles).
- > Before making fixing hole(s), check that there are no obstructions hidden beneath the mounting surface such as pipes or cables.
- > Do not cover the fitting and / or transformer with any insulating materials.
- The lamp must be positioned so that there is at least 0.5m (500mm) between the bulb and any illuminated surface. Spotlights should be positioned well away from curtains and beds to ensure this distance is maintained.
- Do not attach to surfaces which are damp, freshly painted or otherwise electrically conductive (e.g. metallic surfaces).
- If the location of your new fitting requires the provision of a new electrical supply, the supply must conform with the requirements of the Building Regulations making reference to the current edition of the IEE Wiring Regulations (BS7671).

- This product is designed for permanent connection to fixed wiring: this should be either a suitable lighting circuit (protected with a 5 or 6 Amp MCB or fuse) or a fused spur (with a 3 Amp fuse) via a fused connection unit. We recommend that the supply incorporates a switch for ease of operation.
- If using the GZ10 mains Voltage stirrup and lampholder assembly, make connections to the electrical supply in accordance with the following code:

Live—Brown or Red Neutral—Blue or Black

- Additional red wires may be present in your ceiling that are connected to the ring live circuit. Do not connect your fitting to these wires. If these wires are not terminated in a ceiling rose, join them together in a separate terminal block (not supplied), ensure that there are no strands of wire protruding from the terminals and wrap well with insulating tape.
- This fitting is either double insulated or uses SELV (Safety Extra Low Voltage) depending on which stirrup and lampholder assembly you use. You do not need to connect any part to earth.
- You are advised at every stage of your installation to double-check any electrical connections you have made. After you have completed your installation there are electrical tests that should be carried out: these tests are specified in the Wiring Regulations (BS7671) referred to in the Building Regulations. If in doubt, consult a qualified electrician.

Installation:

(€ ♥

- Choose which of the lampholder and stirrup assemblies you intend to use: either the low Voltage or mains Voltage GZ10. If you are using a low Voltage assembly, these instructions assume that you have already installed your transformer.
- 2) Separate the light fitting from the converter plate by pulling firmly from the middle.
- 3) Lay the fitting flat on a surface. Hold the stirrup with the "H" shaped hole over the same shaped hole in the side of the fitting and so that the connection box faces away from the centre of the fitting.
- Still holding the stirrup in place, grip one of the retaining springs and sqeeze the coils together with the short leg facing downwards.

GU10

5) Hook the coils of the spring into the middle of the "H"

Voltage fitting CR80 Downlight converter 070508PA

shaped holes so that the fitting and stirrup are held together.

- 6) Fix the other spring to the "H" shaped hole on the other side of the fitting.
- 7) Offer the adapter plate to the ceiling and thread the supply wires through the hole in the centre.
- Make the electrical connections inside the connection box according to the colour code opposite.
- Thread the lampholder through the hole in the centre of the fitting and allow it to hang freely.
- 10) Ensure that the converter plate is positioned exactly and holding the springs upwards, push the fitting up into the centre of the plate. The short legs must engage with the edge of the hole in the converter plate.

11) Push the fitting firmly into position.


- 12) Remove the circlip fitted into the lamp aperture in the bottom of the fitting
- 13) Fit a lamp according to the type of stirrup you have fitted and according to the maximum Wattage specified overleaf and on the fitting. Ensure that the lamp is fitted correctly and is secure in the lampholder.
- 14) Offer the lamp into the aperture and replace the circlip.
- 15) Restore the power and switch on.



Assembling the spring and stirrup

Assembling the light fitting into the adapter plate: Note the position of the short arm of the retaining spring inside the plate



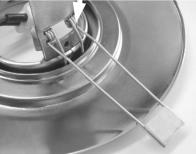

Hole size:

The adaptor plate is 150mm in diameter and will fit into any circular hole with diameter between: 70mm—140mm

